

# Advanced

## Direct connection for Windows

- [dhcp\\_server\\_for\\_windows](#)
- [direct\\_connection](#)

## File Tag Encoding and Display Issues

[https://kb.roonlabs.com/FAQ:Some\\_characters\\_are\\_not\\_displaying\\_properly](https://kb.roonlabs.com/FAQ:Some_characters_are_not_displaying_properly)

## Re-burning SD Card

Only for SMS-200, to initialize whole system.

- [burn\\_sdcard\\_image](#)

## Installing Eunhasu\_x86 for SMS-1000SQ

Only for SMS-1000SQ, to initialize whole system.

- [Installing\\_Eunhasu\\_x86](#)

## IckStream in LMS (not supported since May 2019)

- [how\\_to\\_install\\_ickstream\\_app\\_in\\_lms](#)



LMS should be restart when you reboot Eunhasu because IckStream plugin could not get login information just after reboot.

From:

<https://docs.sotm-audio.com/> - **SOTM docs**

Permanent link:

<https://docs.sotm-audio.com/doku.php?id=en:eunhasu:advanced>

Last update: **2019/07/22 01:53**

