

Advanced

Direct connection for Windows

[dhcp_server_for_windows](#)

Re-burning SD Card

Only for SMS-200, to initialize whole system.

[burn_sdcard_image](#)

File Tag Encoding and Display Issues

https://kb.roonlabs.com/FAQ:Some_characters_are_not_displaying_properly

IckStream in LMS

[how_to_install_ickstream_app_in_lms](#)



LMS should be restart when you reboot Eunhasu because IckStream plugin could not get login information just after reboot.

From:

<https://www.docs.sotm-audio.com/> - **SOTM docs**

Permanent link:

<https://www.docs.sotm-audio.com/doku.php?id=en:eunhasu:advanced&rev=1563774657>

Last update: **2019/07/22 01:50**

