

- SMS-200 V0.3.0      SMS-1000SQ Eunhasu V0.3.0
- Wifi dongle
  - RTL8812AU

## Simple Instruction


USB

Wifi USB





System config

'Wifi'

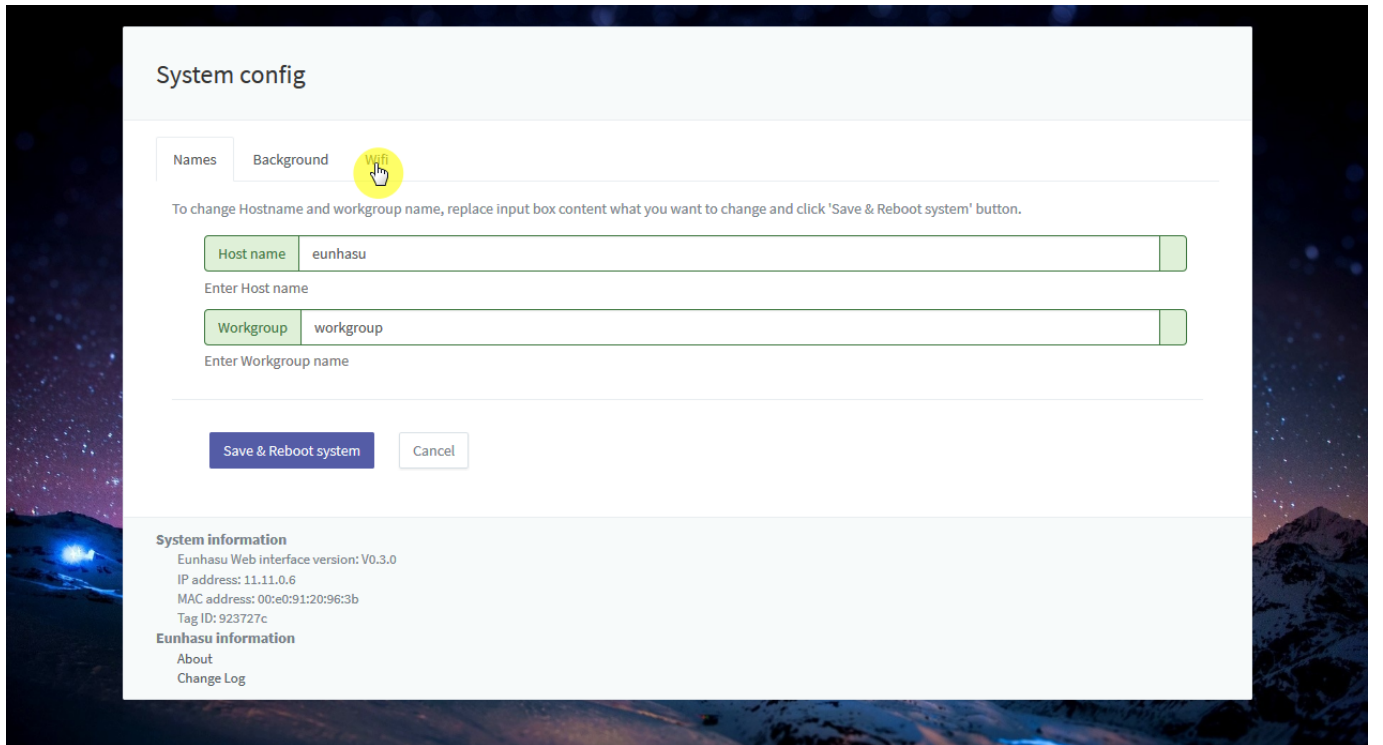



### 'Wifi Router'

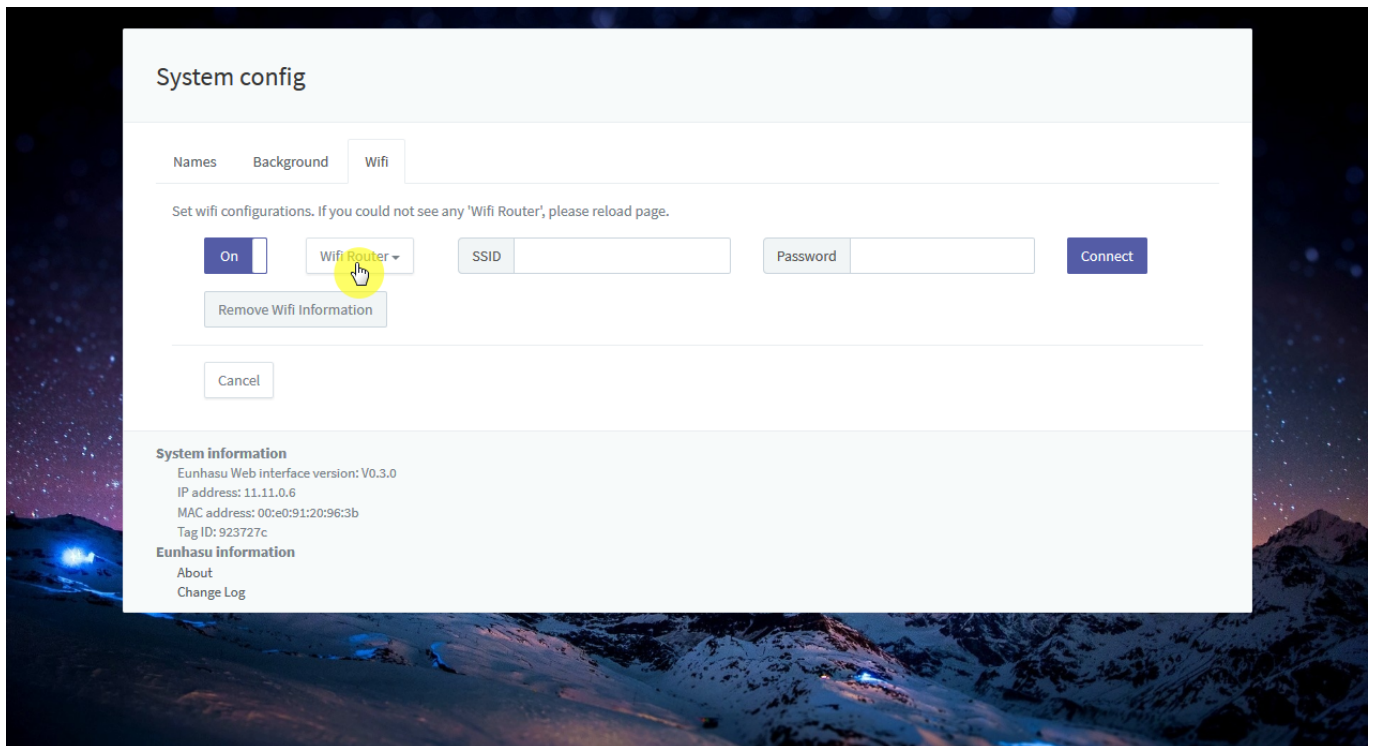

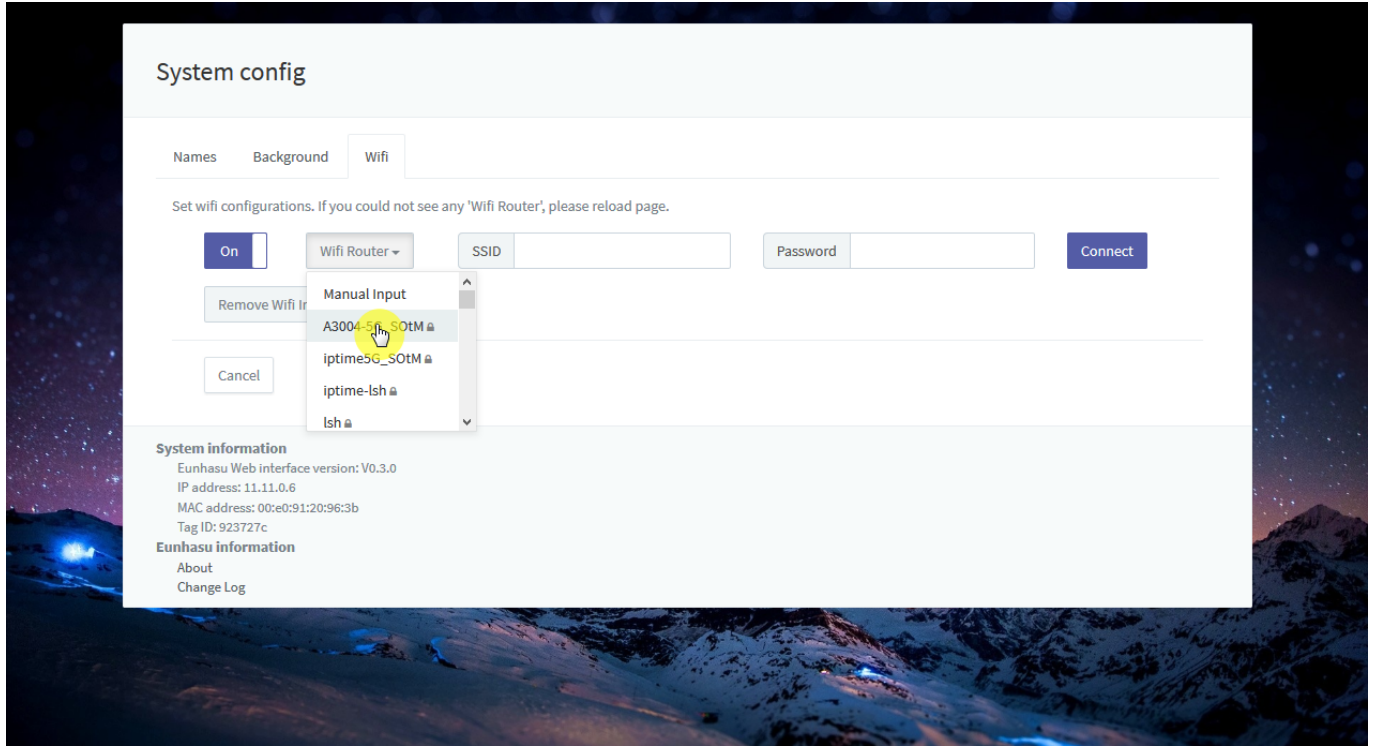


'Connect'

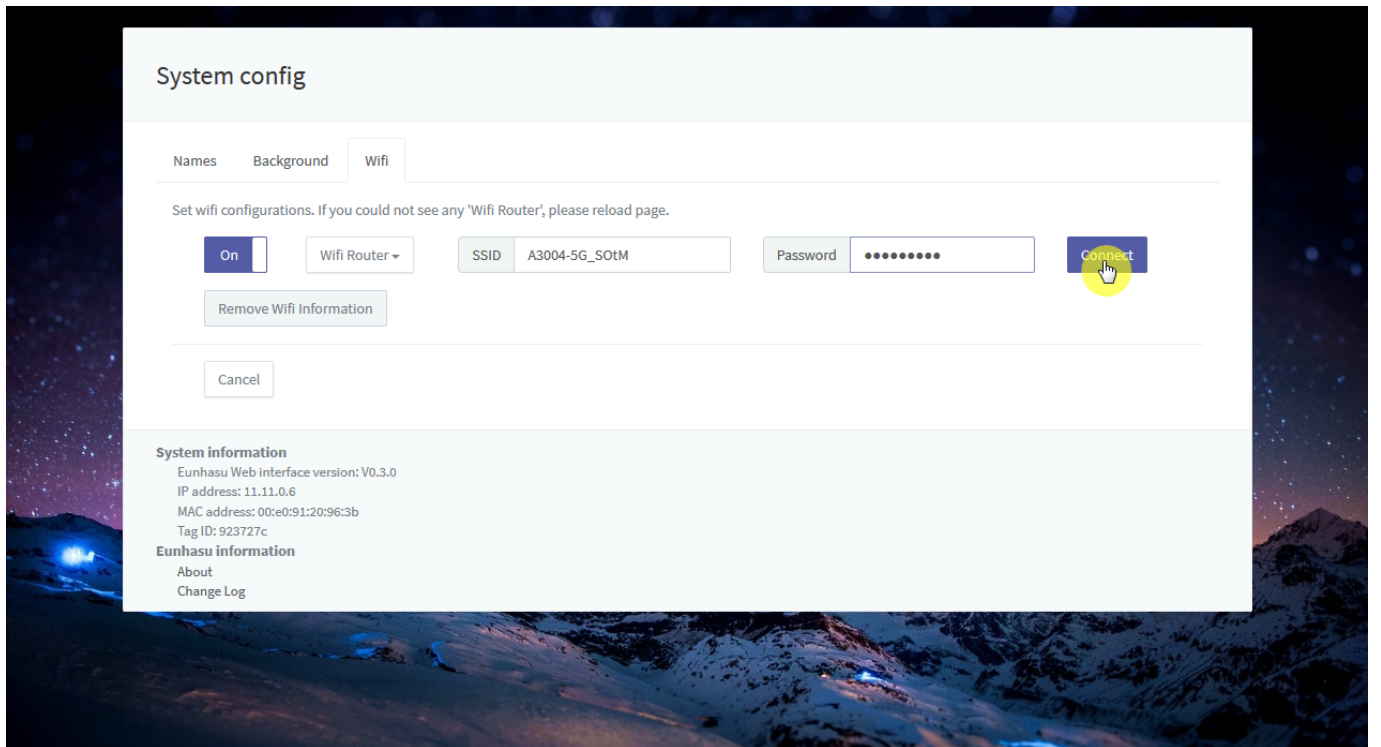

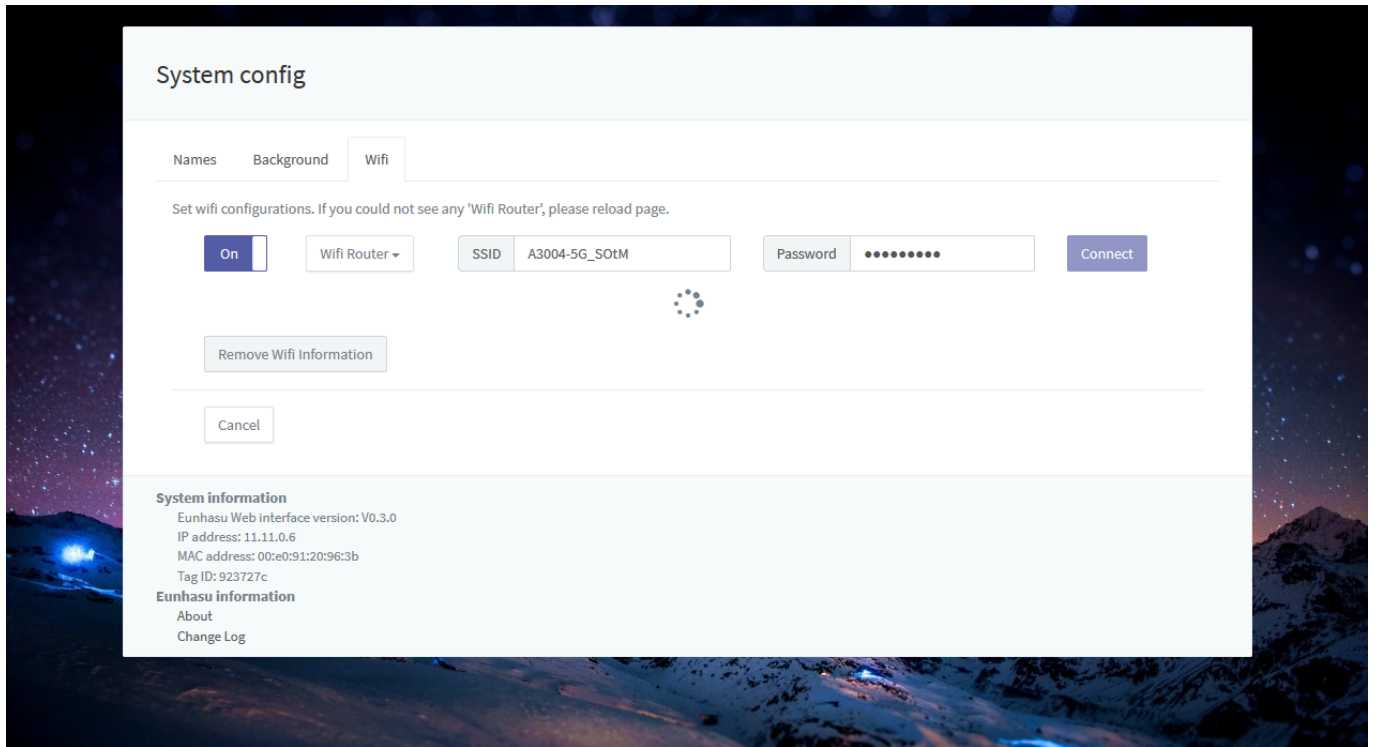

IP

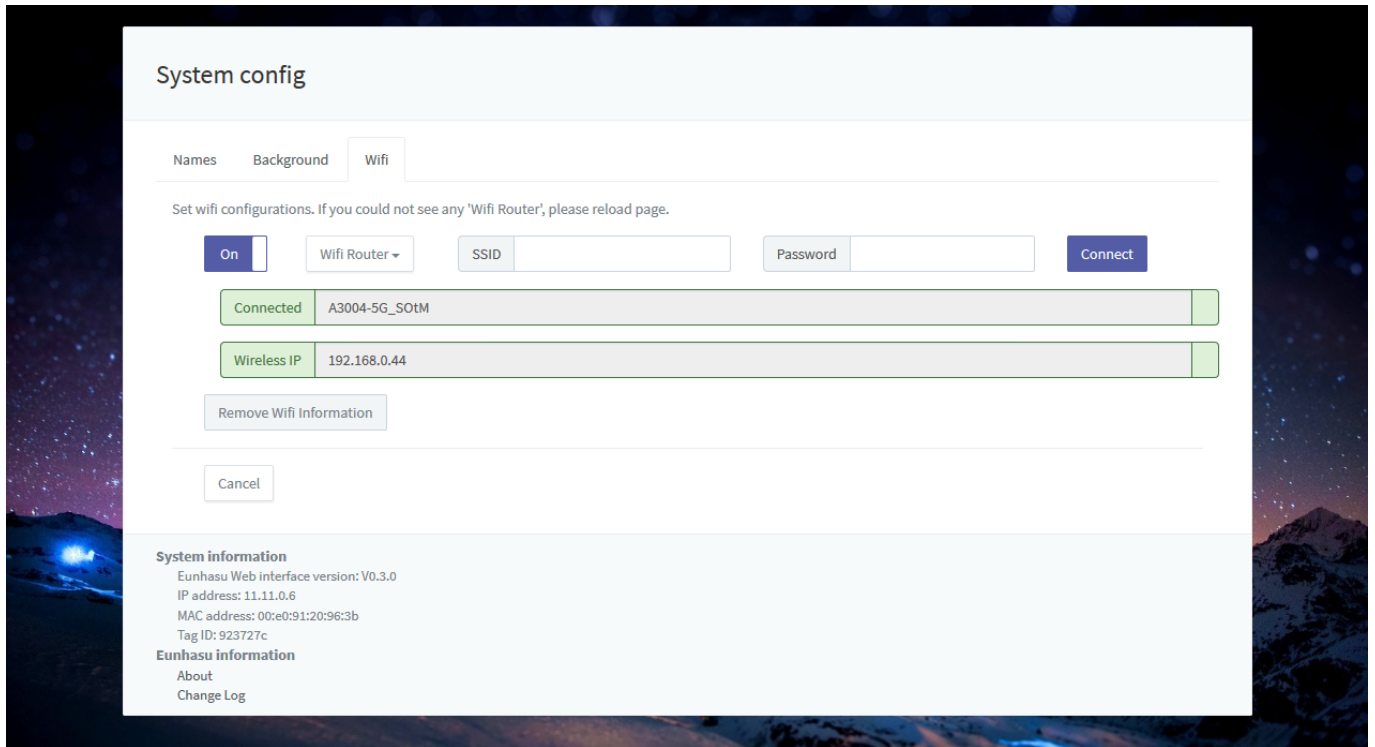

'Remove Wifi Information'

AP 가

### System config

Names Background **Wifi**

Set wifi configurations. If you could not see any 'Wifi Router', please reload page.

On

Connected	A3004-5G_SOTM
Wireless IP	192.168.0.44

---

**System information**  
Eunhasu Web interface version: V0.3.0  
IP address: 11.11.0.6  
MAC address: 00:e0:91:20:96:3b  
Tag ID: 923727c

**Eunhasu information**  
[About](#)  
[Change Log](#)

From:  
<https://www.docs.sotm-audio.com/> - **SOTM docs**

Permanent link:  
[https://www.docs.sotm-audio.com/doku.php?id=ko:how\\_to\\_use\\_wifi\\_in\\_eunhasu&rev=1483693342](https://www.docs.sotm-audio.com/doku.php?id=ko:how_to_use_wifi_in_eunhasu&rev=1483693342)

Last update: **2017/01/06 04:02**

