

- SMS-200 V0.3.0      SMS-1000SQ Eunhasu V0.3.0
- Wifi dongle
  - RTL8812AU

## Simple Instruction


USB

Wifi USB




System config

'Wifi'

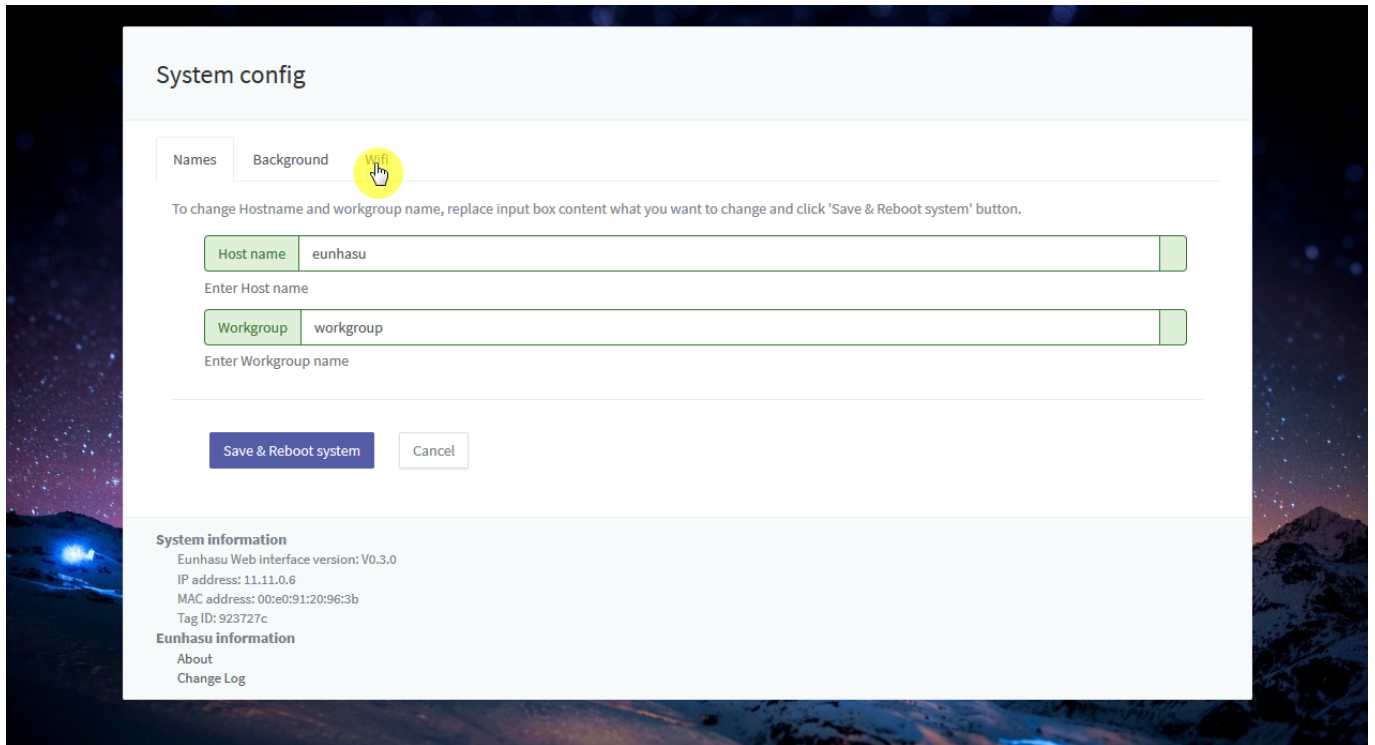



### 'Wifi Router'

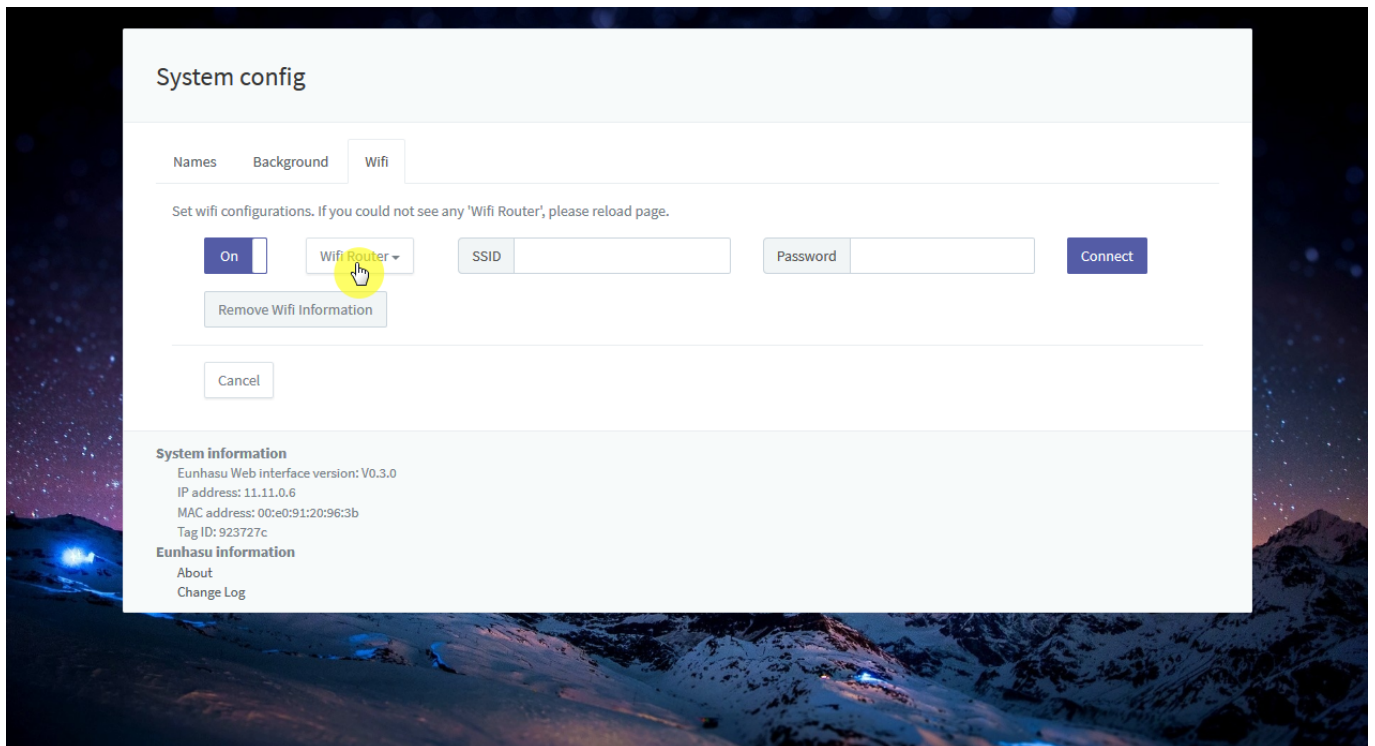




'Connect'

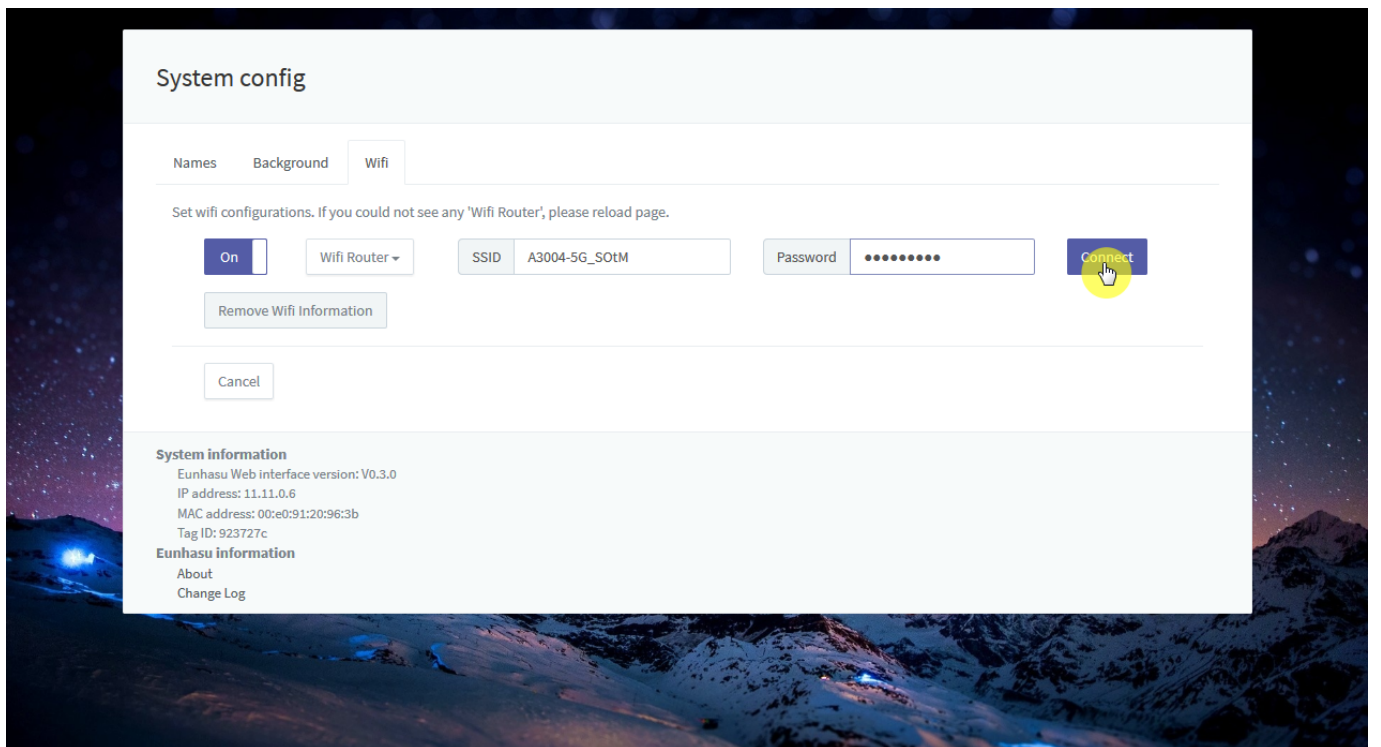

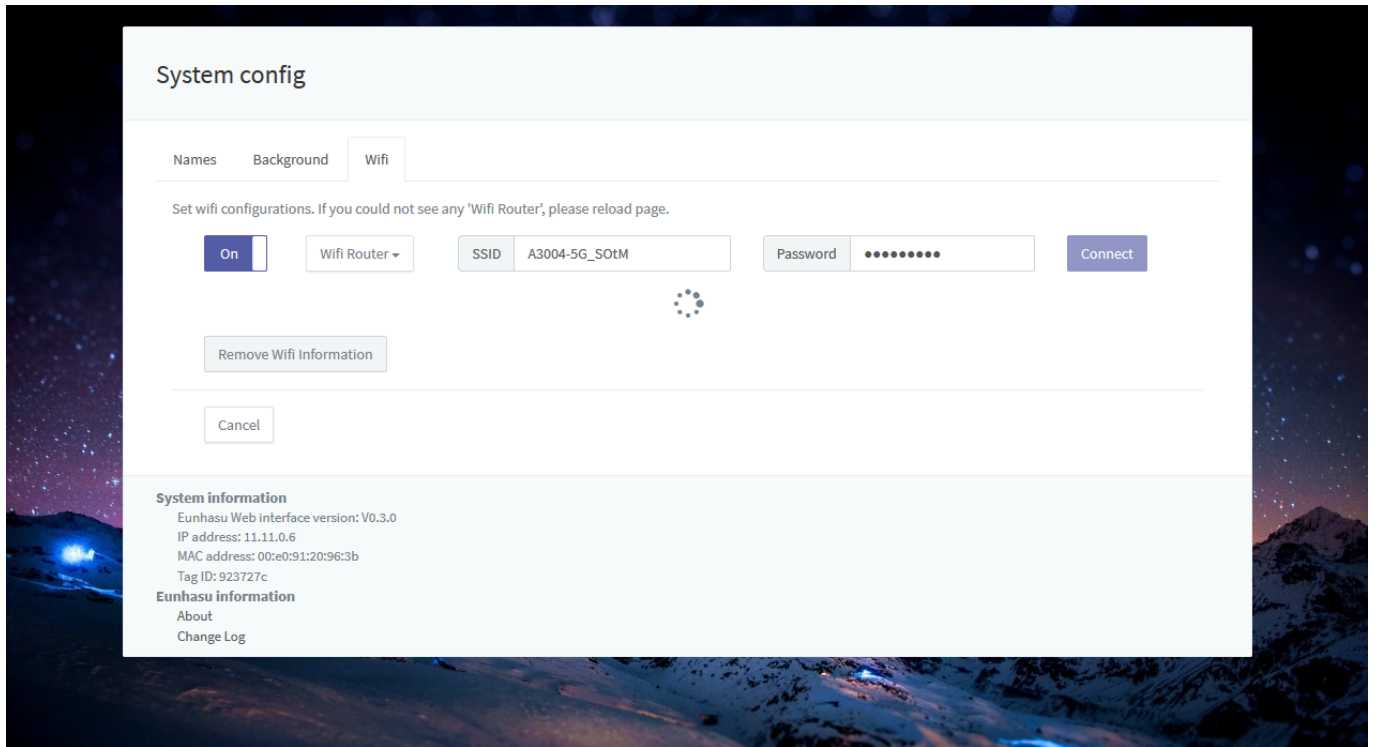

IP

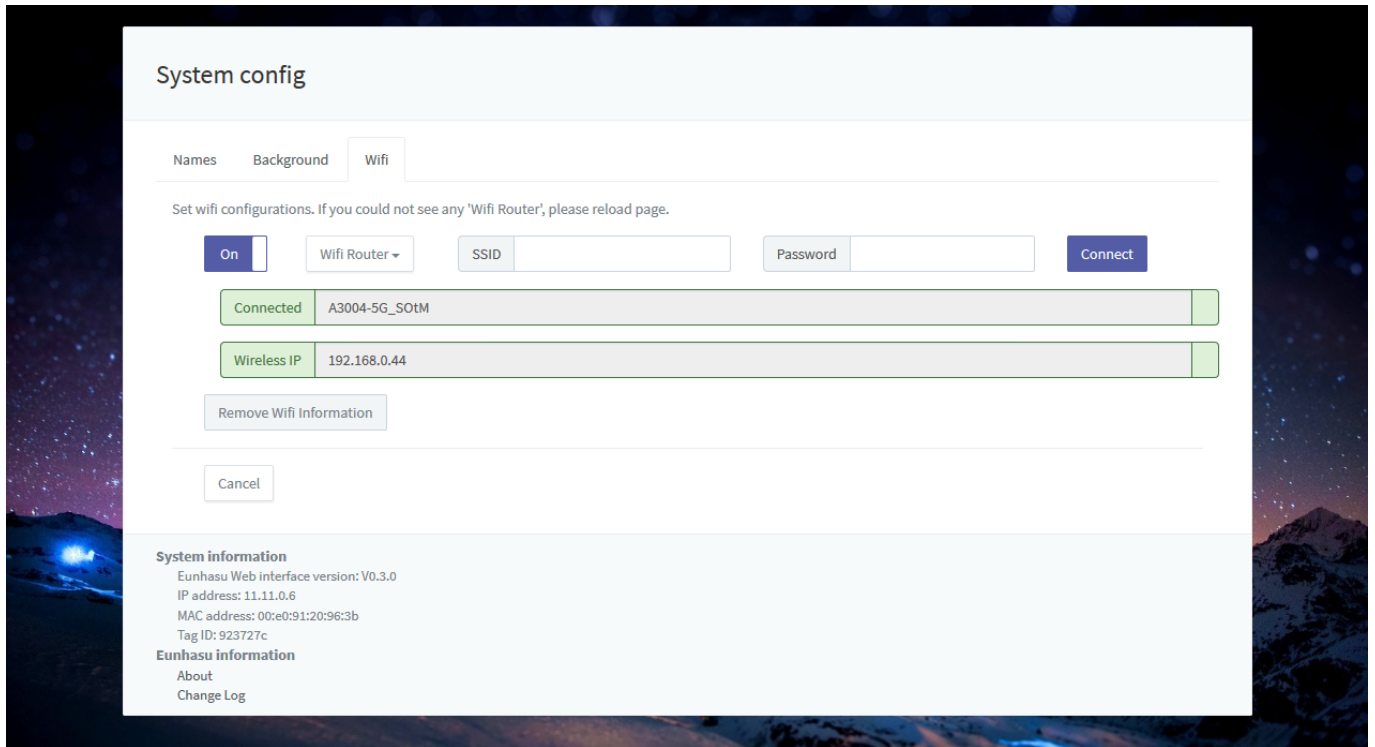

'Remove Wifi Information'

AP 가

### System config

Names Background **Wifi**

Set wifi configurations. If you could not see any 'Wifi Router', please reload page.

On   
 Wifi Router ▾   
 SSID    
 Password    

Connected A3004-5G\_SOTM

Wireless IP 192.168.0.44


---

**System information**

Eunhasu Web interface version: V0.3.0  
 IP address: 11.11.0.6  
 MAC address: 00:e0:91:20:96:3b  
 Tag ID: 923727c

**Eunhasu information**

About  
 Change Log



- Eunhasu V0.3.0
- 가
- 가

From:  
<https://www.docs.sotm-audio.com/> - **SOTM docs**

Permanent link:  
[https://www.docs.sotm-audio.com/doku.php?id=ko:how\\_to\\_use\\_wifi\\_in\\_eunhasu&rev=1484880969](https://www.docs.sotm-audio.com/doku.php?id=ko:how_to_use_wifi_in_eunhasu&rev=1484880969)

Last update: **2017/01/19 21:56**

