

# Roon

Roon

가

. Control, Output, Core

Roon

## Roon Ready


Roon Ready Roon Server, Roon Remote

. Roon Ready

RoonBridge

. hqplayer\_ana

## Roon Ready config

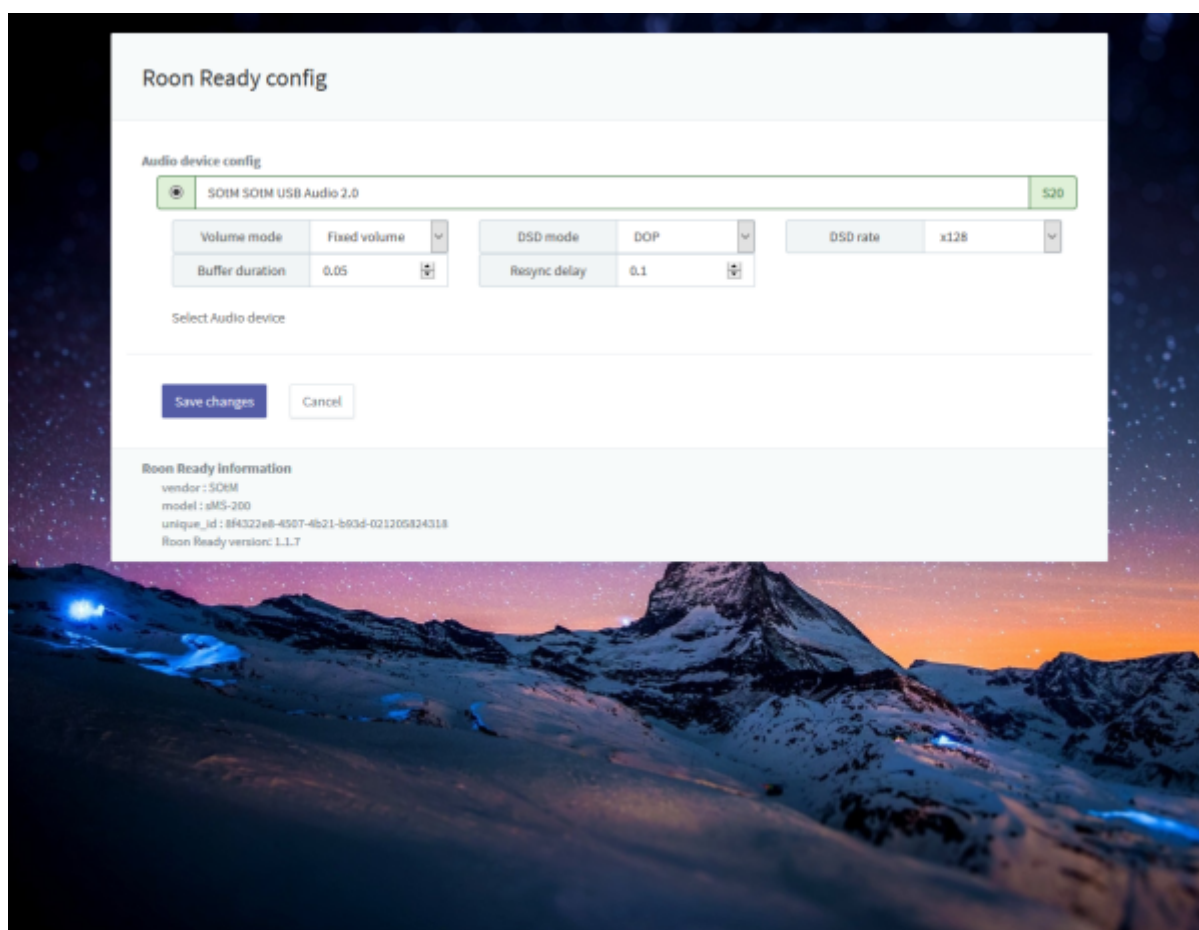



- **Audio device config:** USB DAC
- **Volume mode:** Fixed, Software, Device Controls
- **DSD mode:** DSD NONE, NATIVE, DOP, DCS, NATIVE/DOP, NATIVE/DCS
- **DSD rate:** DSD x64, x128, x256
- **Buffer duration:** 가

- Resync delay: 0.1 ~ 0.5 0.01 .


# Roon Ready

Roon Ready 'Active' . Roon Desktop Setting > Audio Roon  
SMS-200 .  
Roon Ready 'Active' . Roon Remote Setting > Audio Roon  
SMS-200 .

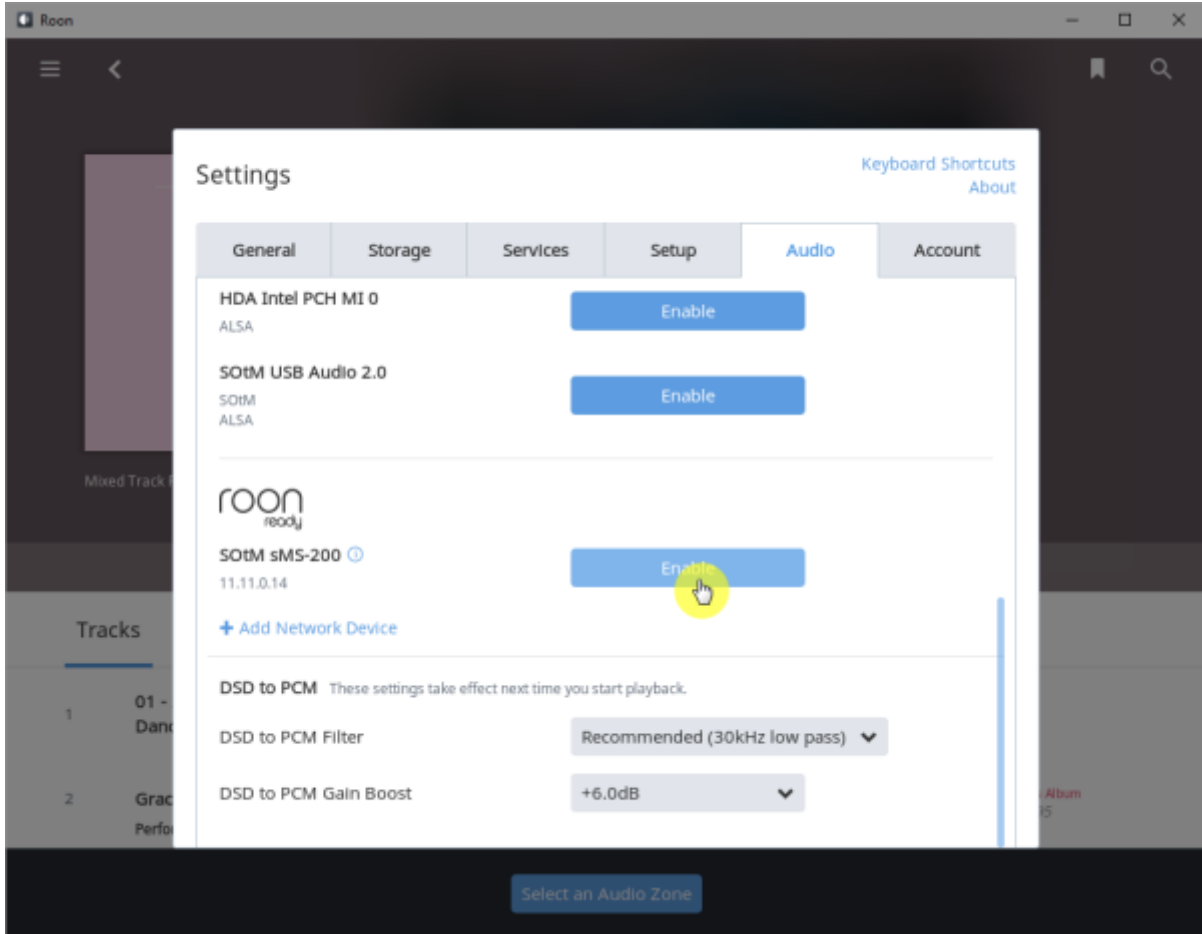

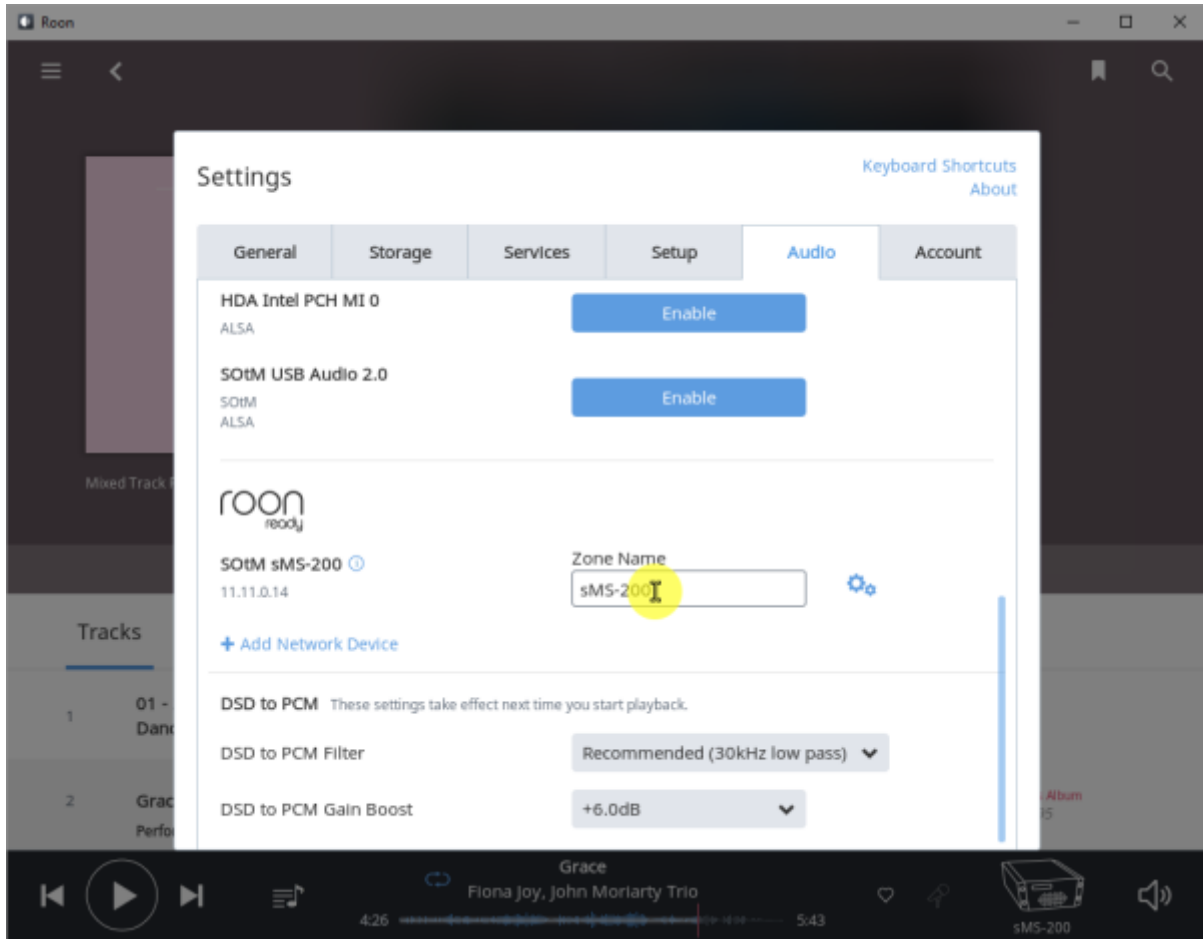

sMS-200 Audio zone

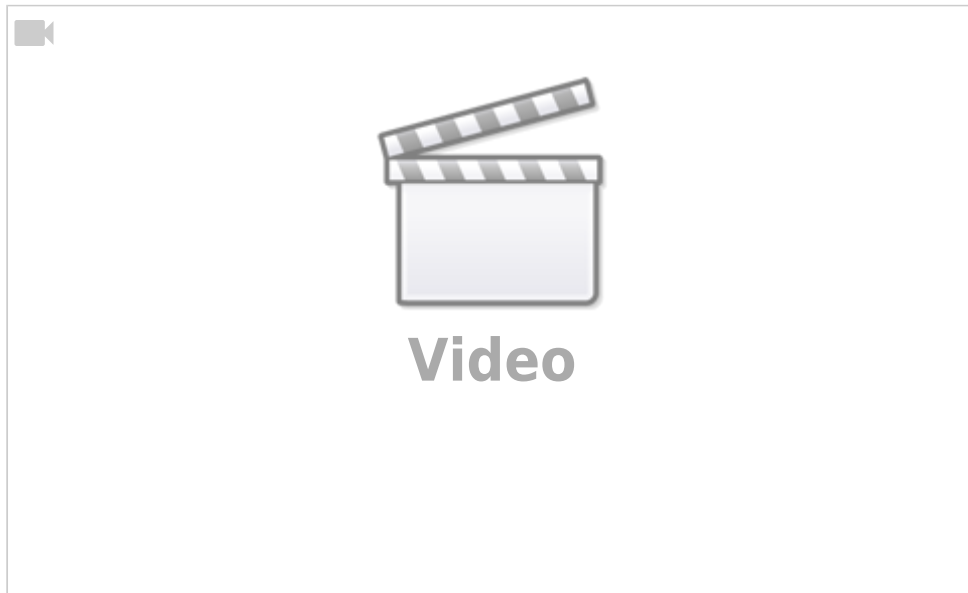

# Roon Server


Roon Server   Roon Core   Roon Output

Roon Remote


[. Roonlabs](https://www.roonlabs.com)

# Roon Server



## Roon Server

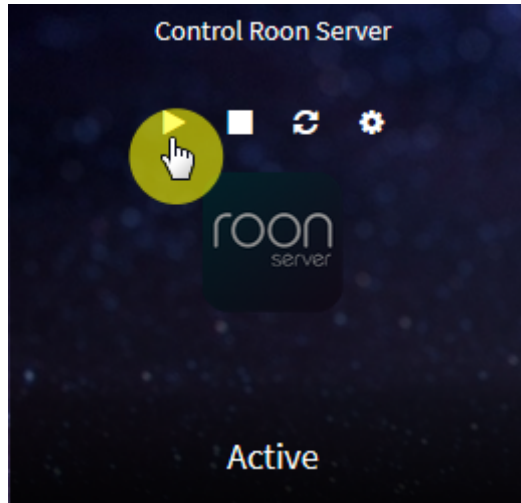

Roon Server 가 (Active) Roon Desktop Core SMS-1000SQ Core

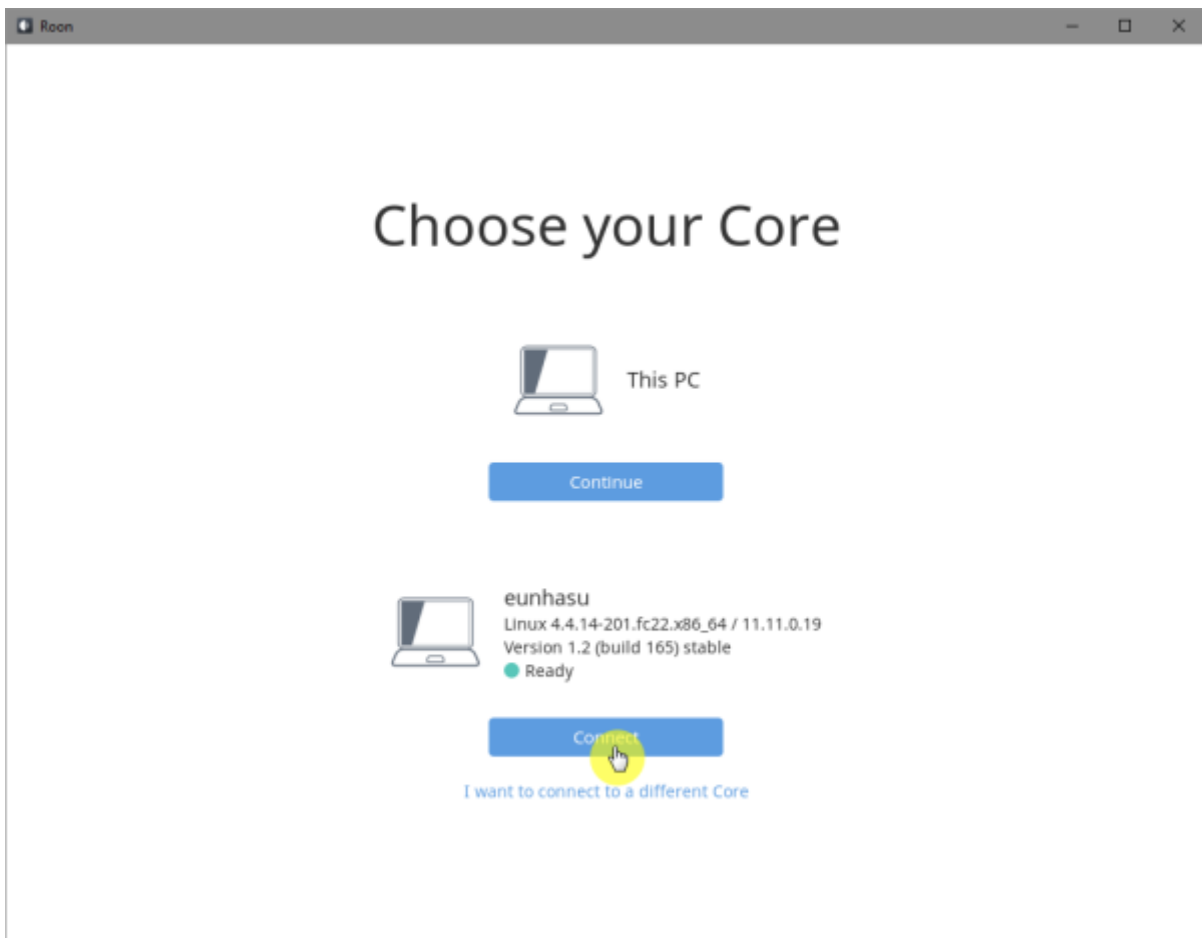

## Core

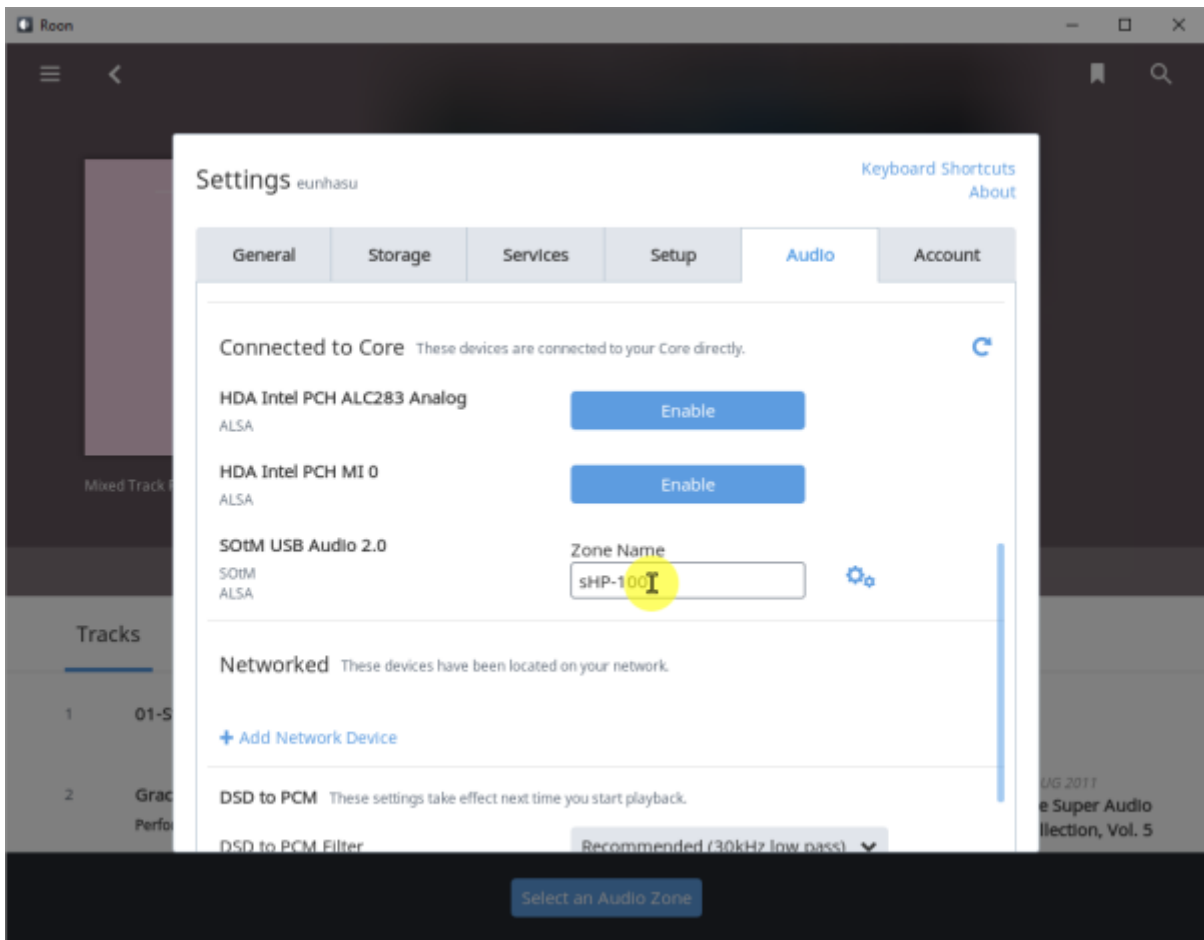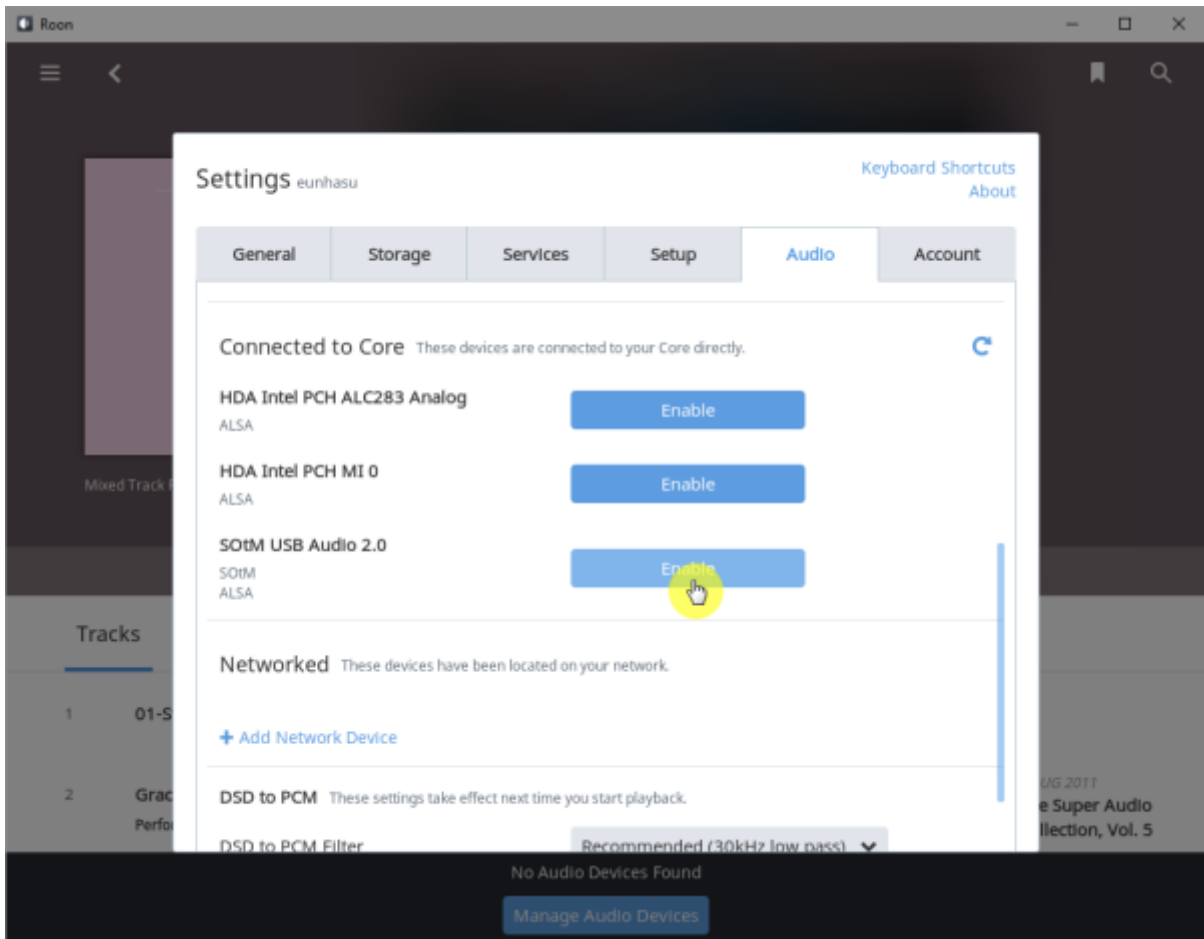

### Audio Zone



: 2017/01/25 00:52

From:  
<https://www.docs.sotm-audio.com/> - **SOTM docs**

Permanent link:  
<https://www.docs.sotm-audio.com/doku.php?id=ko:roon&rev=1485323520>

Last update: **2017/01/25 00:52**

