

# Roon

Roon 가 . Control, Output, Core

Roon

## Roon Ready


Roon Ready Roon Server, Roon Remote

. Roon Ready

RoonBridge

. hqplayer\_naa

## Roon Ready config

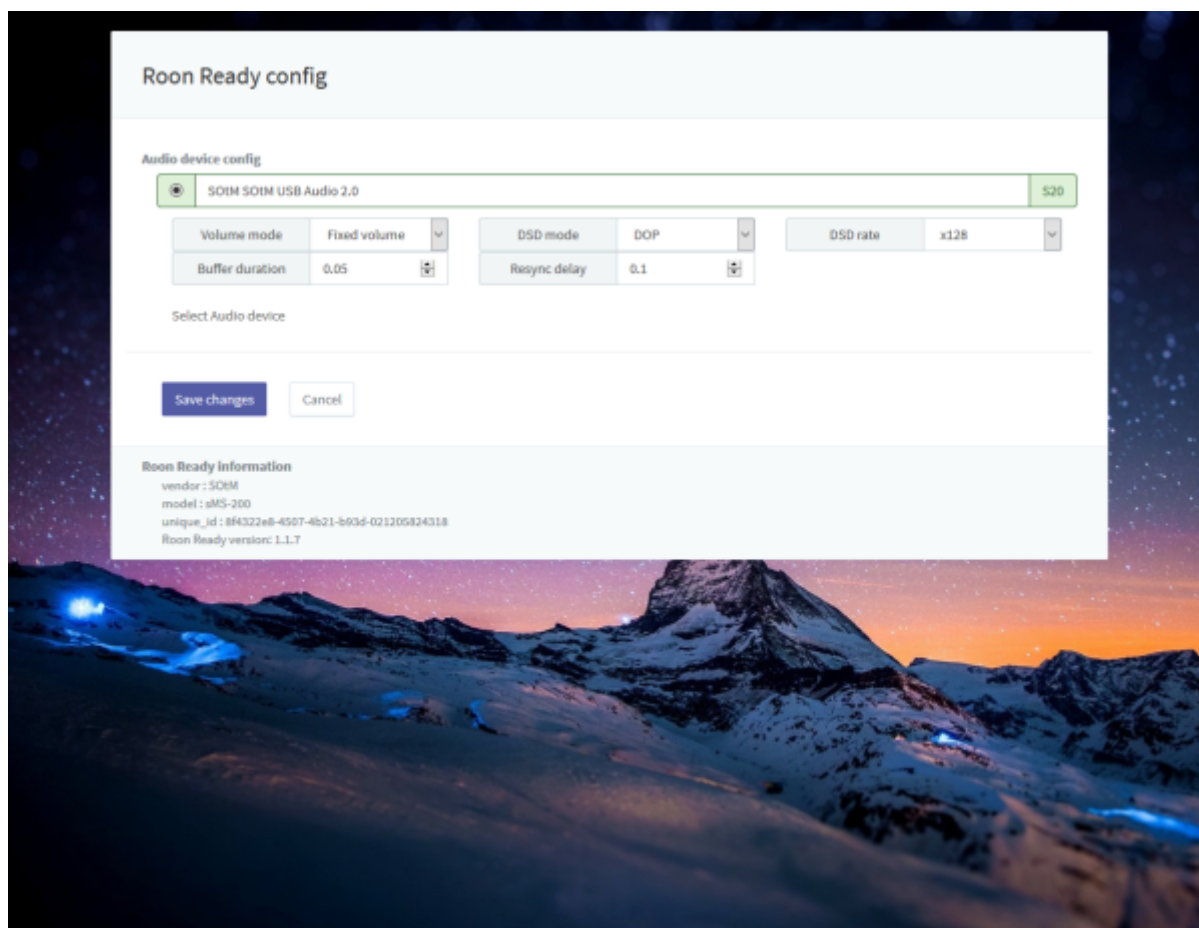



- **Audio device config:** USB DAC
- **Volume mode:** Fixed, Software, Device Controls
- **DSD mode:** DSD NONE, NATIVE, DOP, DCS, NATIVE/DOP, NATIVE/DCS
- **DSD rate:** DSD x64, x128, x256
- **Buffer duration:** 가

- Resync delay: 0.1 ~ 0.5 0.01


# Roon Ready

Remote Roon Server Roon Ready 'Active' Roon  
Settings > Audio Roon Ready SMS-200

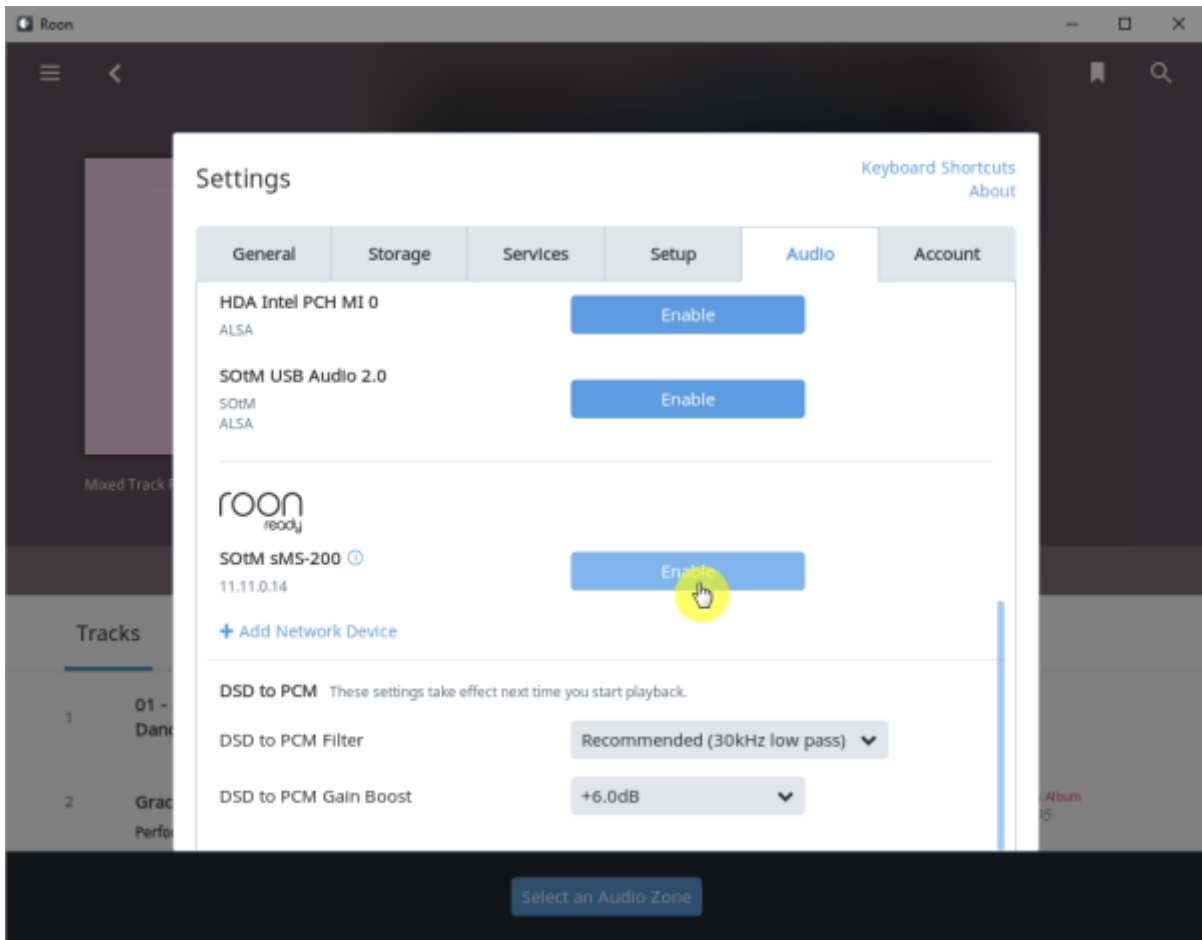

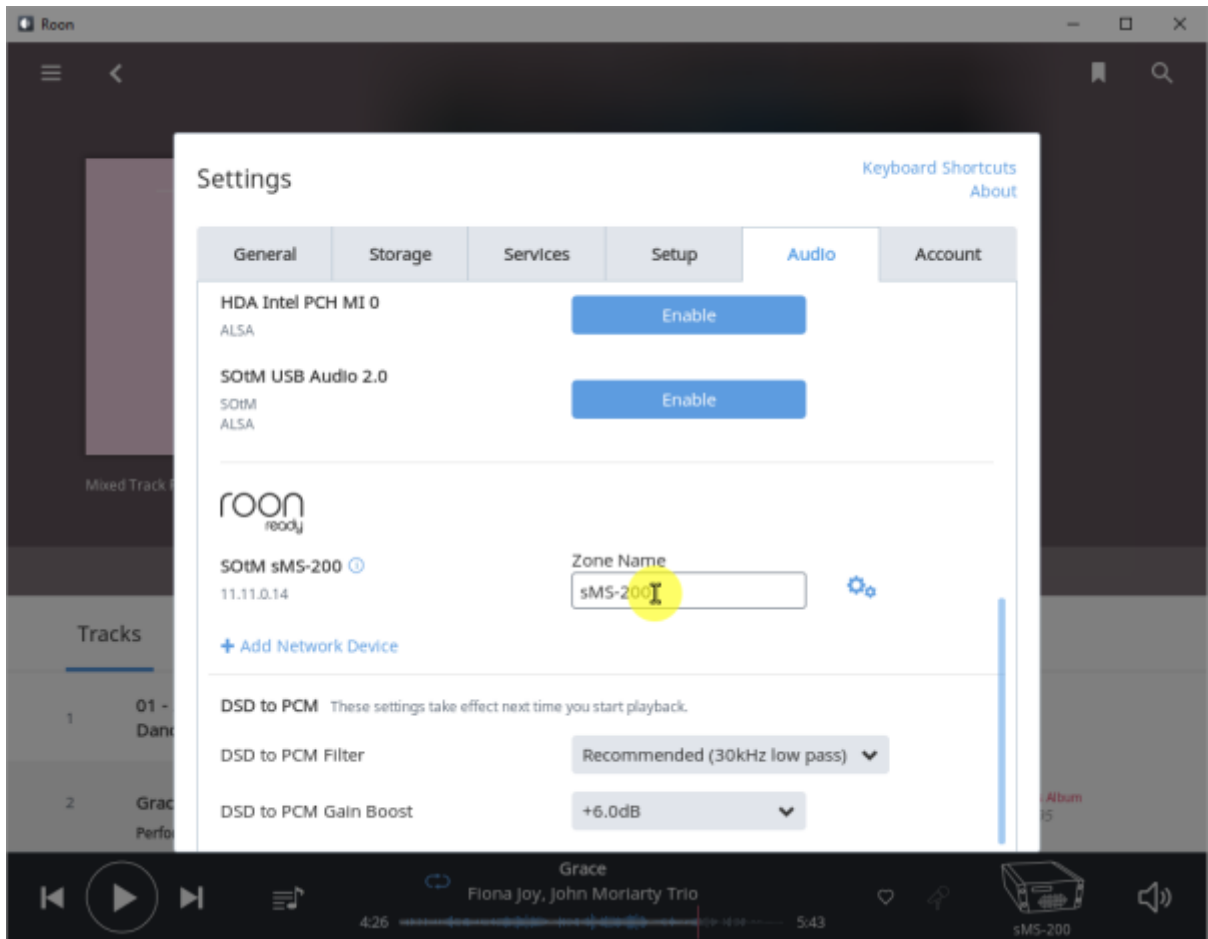

sMS-200 Audio zone

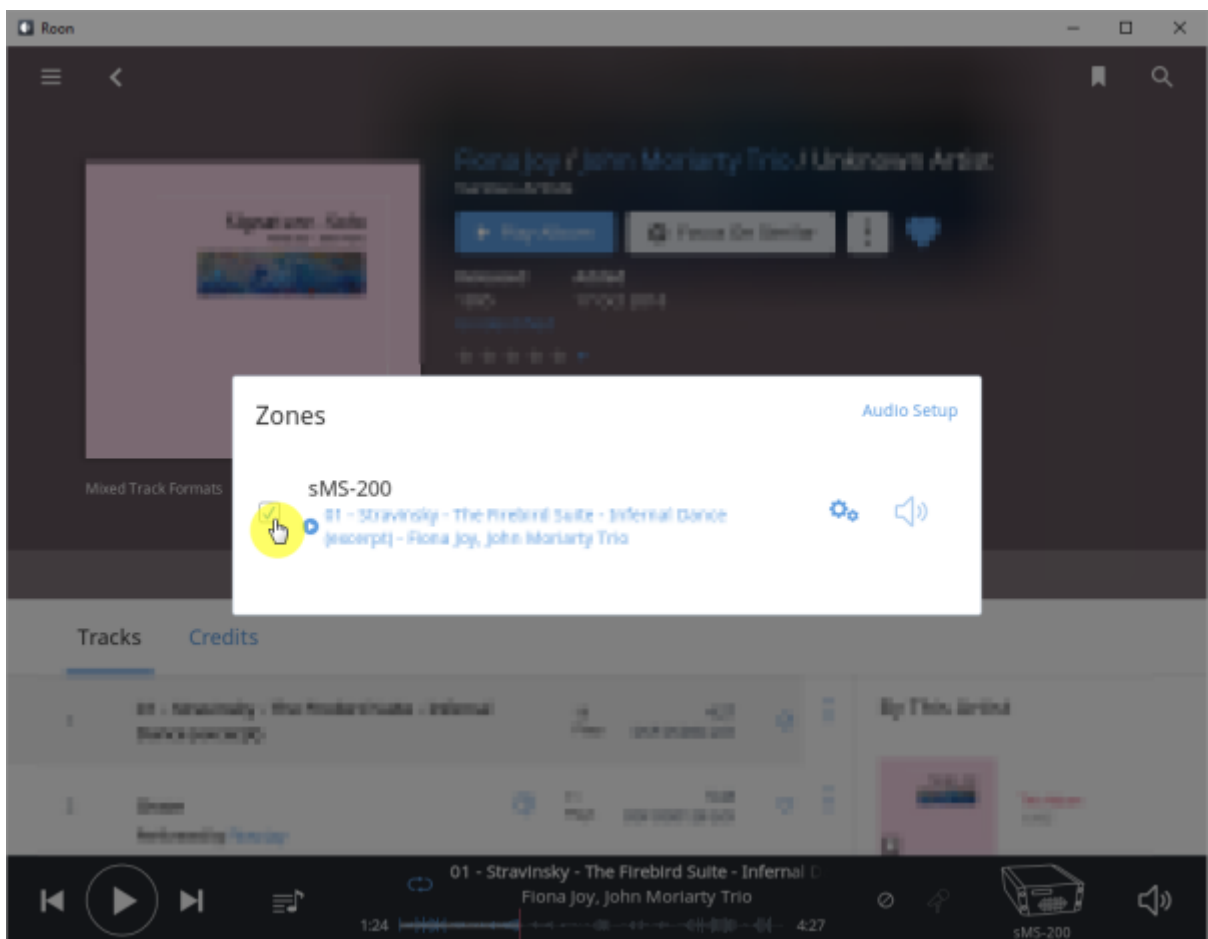




# Roon Server

Roon Server   Roon Core   Roon Output   Roon Remote   [Roonlabs](#)

# Roon Server

[Eunhasu](#)   Roon Server   'Active'

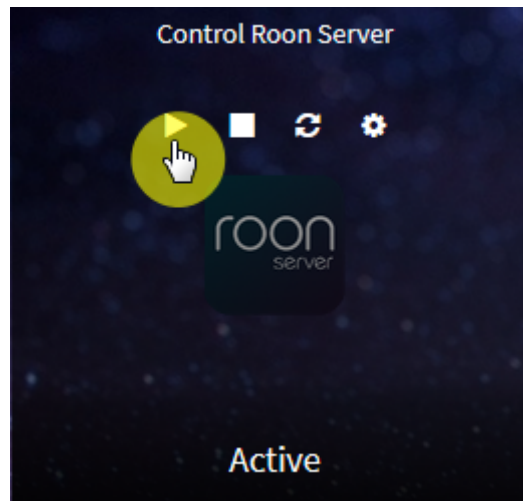


[Roon Server](#) 가 'Active'   Roon Desktop   Core   SMS-1000SQ   Core



Core



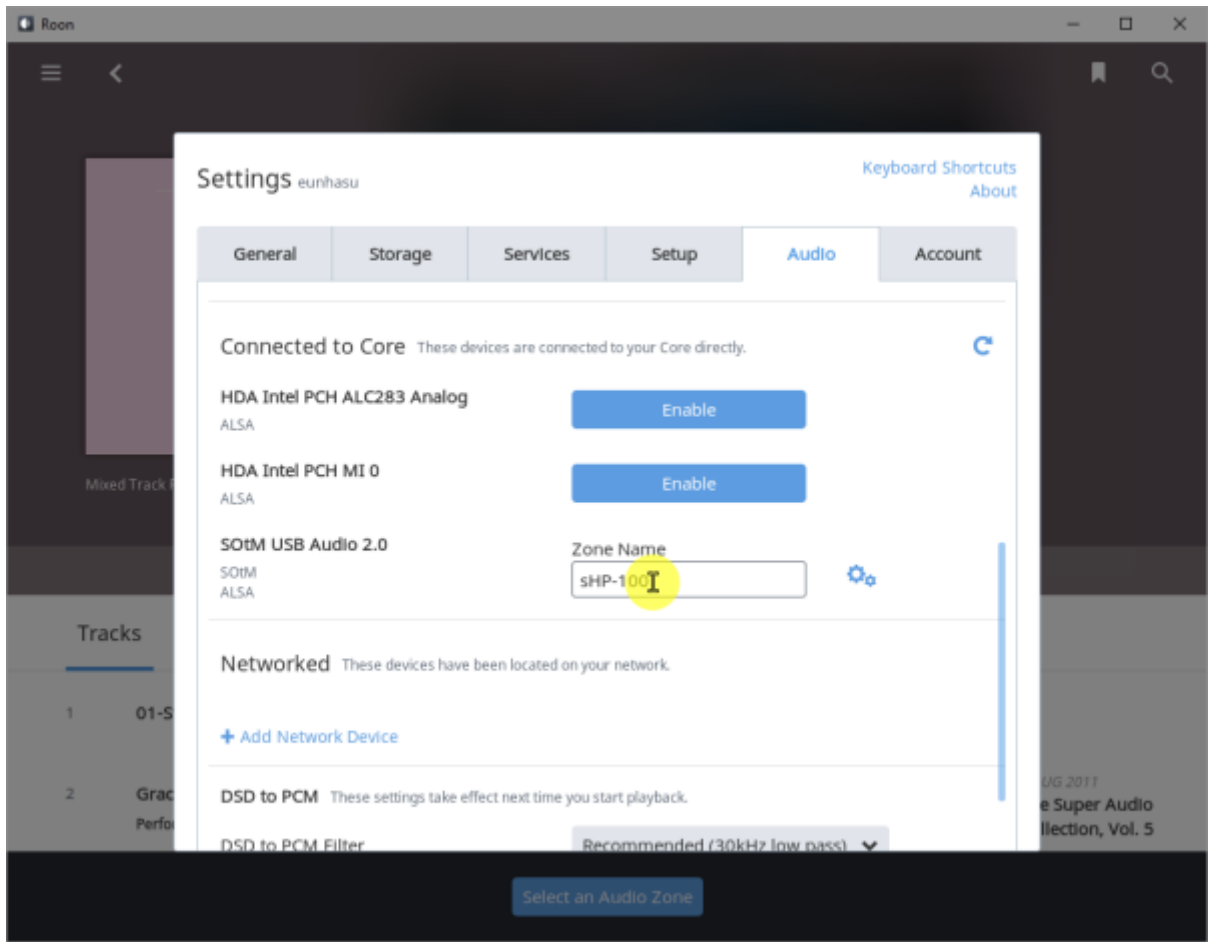

Audio Zone



: 2017/01/25 19:48

From:  
<https://www.docs.sotm-audio.com/> - **SOTM docs**

Permanent link:  
<https://www.docs.sotm-audio.com/doku.php?id=ko:roon&rev=1485391682>

Last update: **2017/01/25 19:48**

