

How to make direct connection between sMS device and Windows system.

Download tftpd32 and install it.


Example setting to enable DHCP server on you windows system:

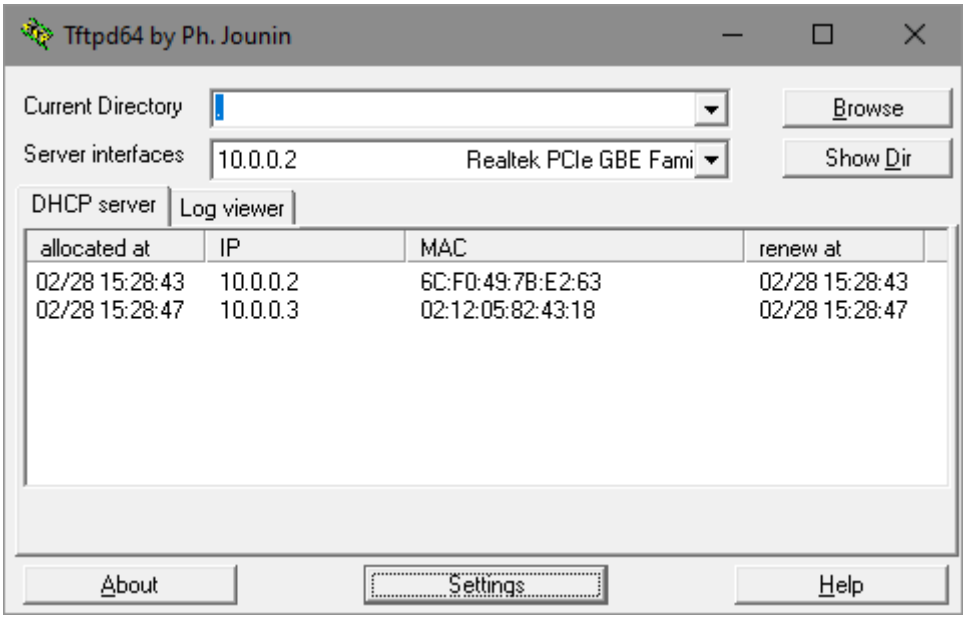


Click a button named 'Settings'

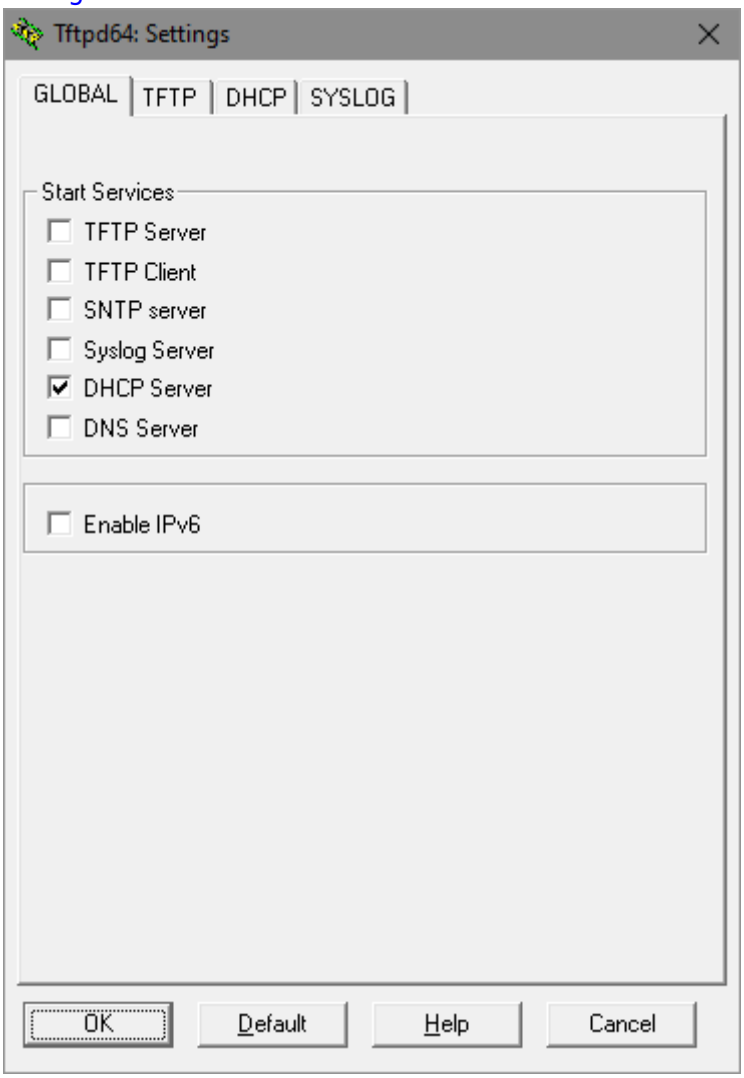


Select DHCP server

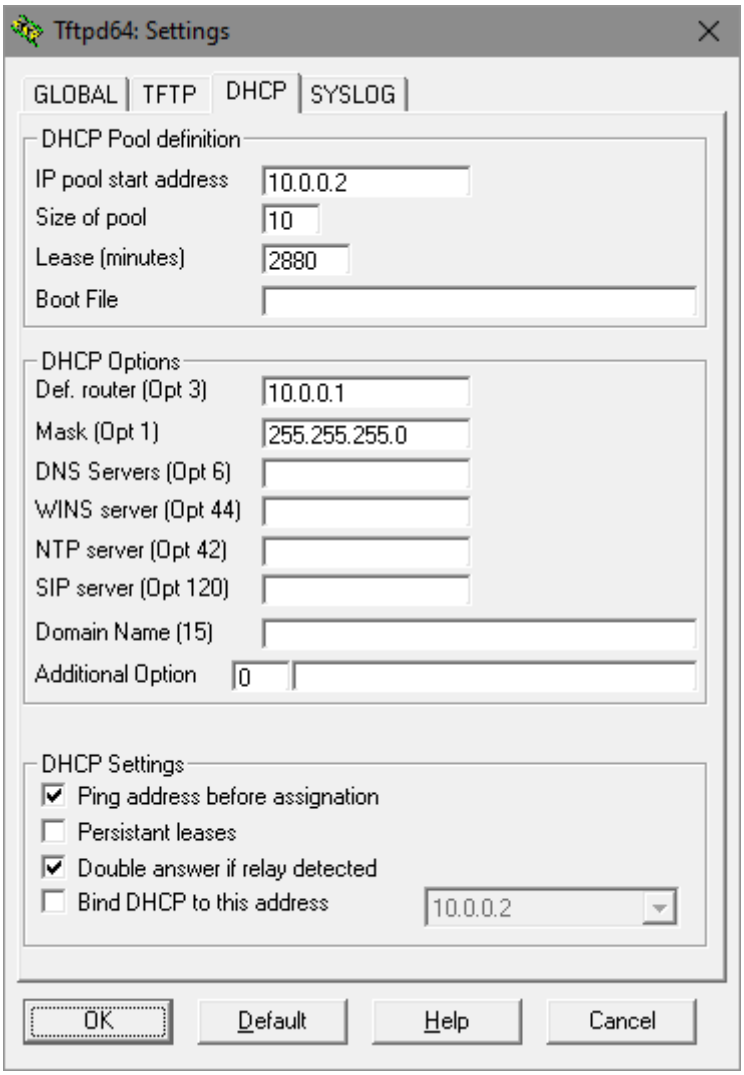

Set configurations like my example or what you want

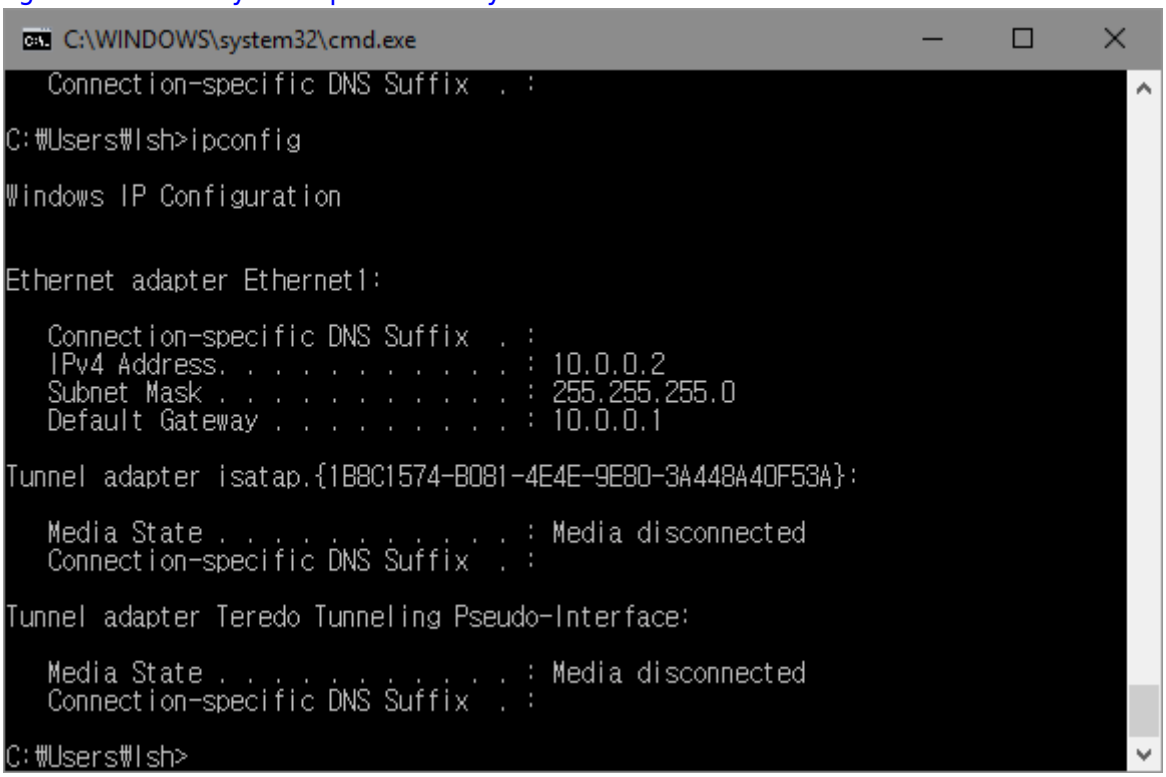

Windows result

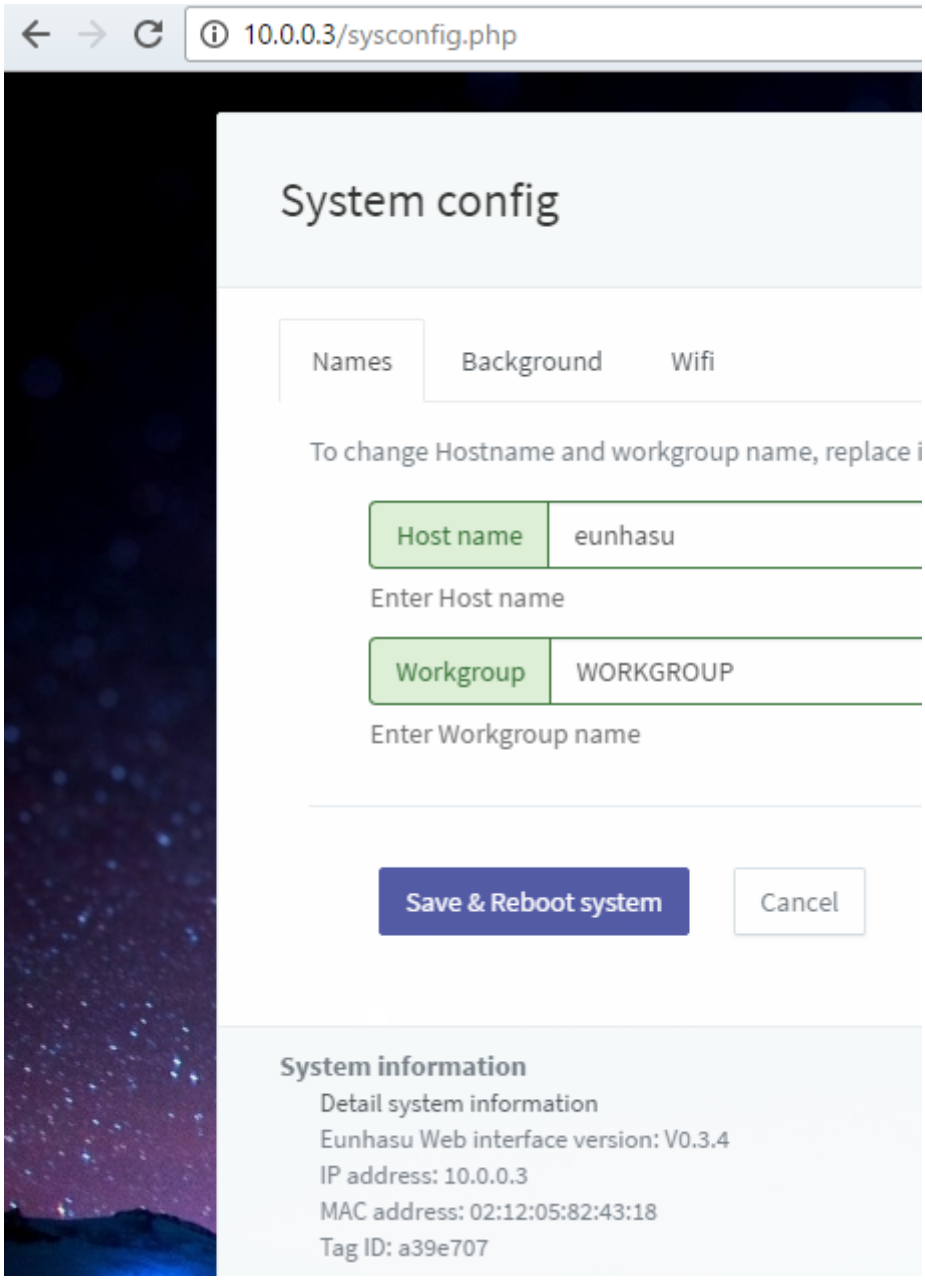

sMS-200 result of dynamic IP allocation

From:
https://www.docs.sotm-audio.com/ - **SOtM docs**

Permanent link:
https://www.docs.sotm-audio.com/doku.php?id=en:kb:dhcp_server_for_windows&rev=1489130132

Last update: **2017/03/10 02:15**