

How to update the sMB-Q370 Bios version

If there is .exe Bios file


1. Boot up with WindowsOS. Download D8260T36.zip file and unzip properly.

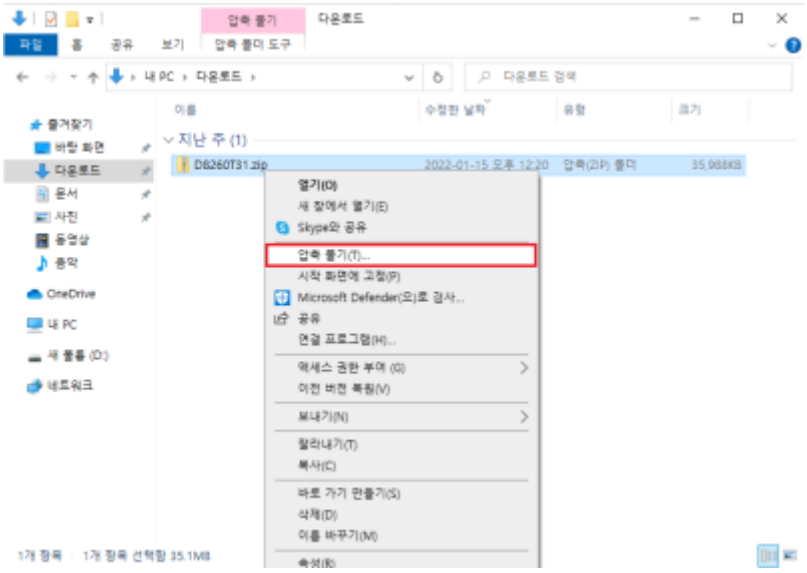

2. Run D8260T36.exe as administrator.

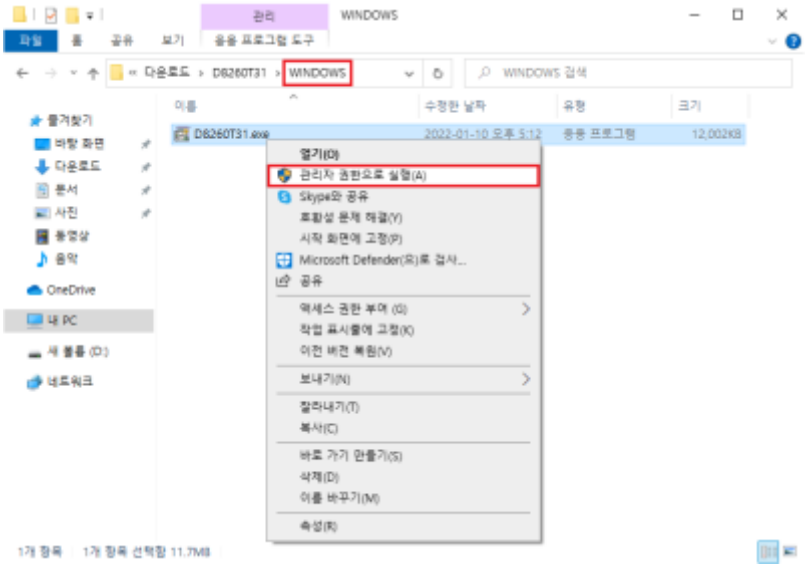


3. Wait till the update would be completed, then the windows will be closed.

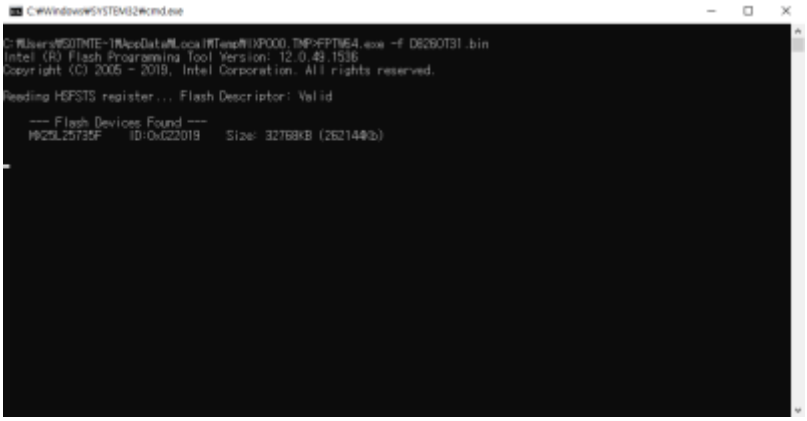



If there is .rom Bios file


1. Download D8260T36.zip and extract(unzip). 2. Copy D8260T36.rom file to an USB drive. 3. Connect the USB drive to any sMB-Q370 USB port and then turn on. 4. Press DEL Key to enter BIOS menu.

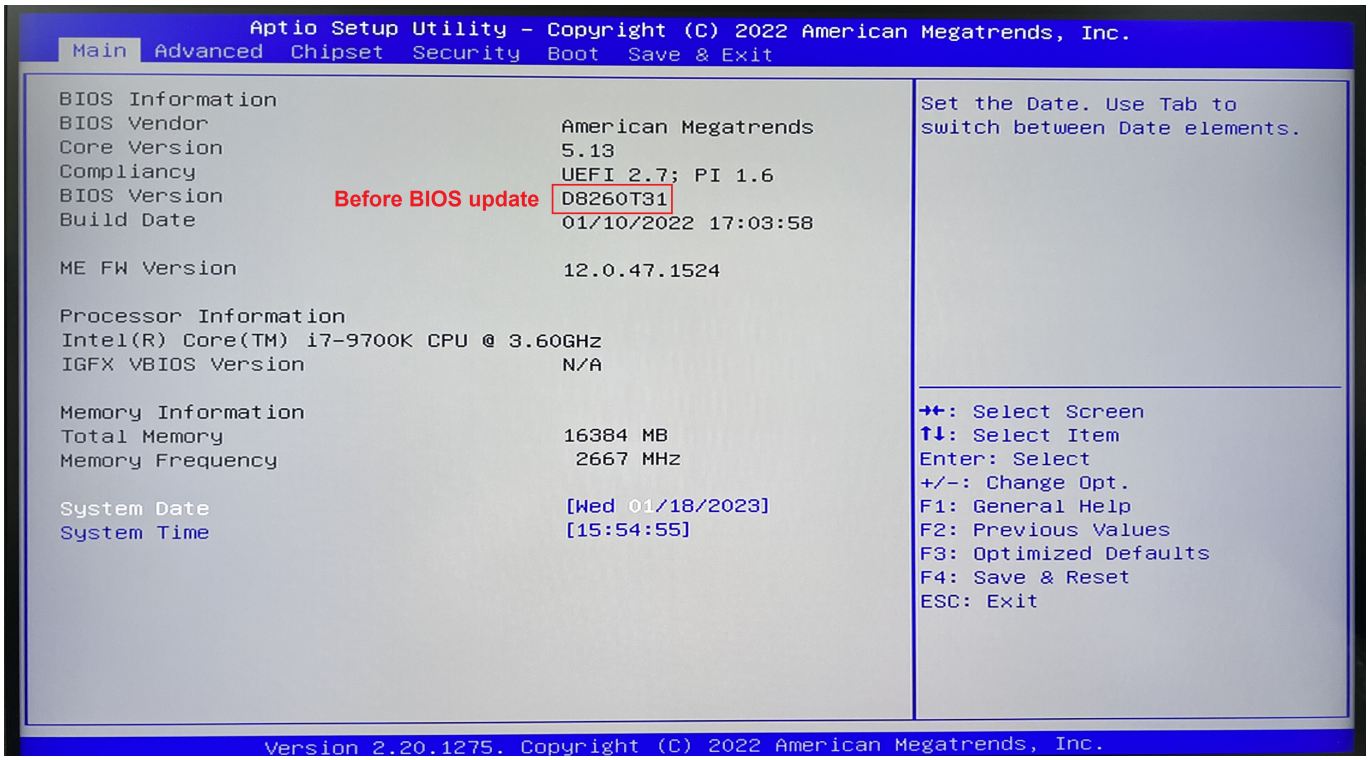


5. Go to Security→Secure Flash Update→Path for ROM Image→Select a File system→Select File, and select D8260T36.rom > OK to reboot System.

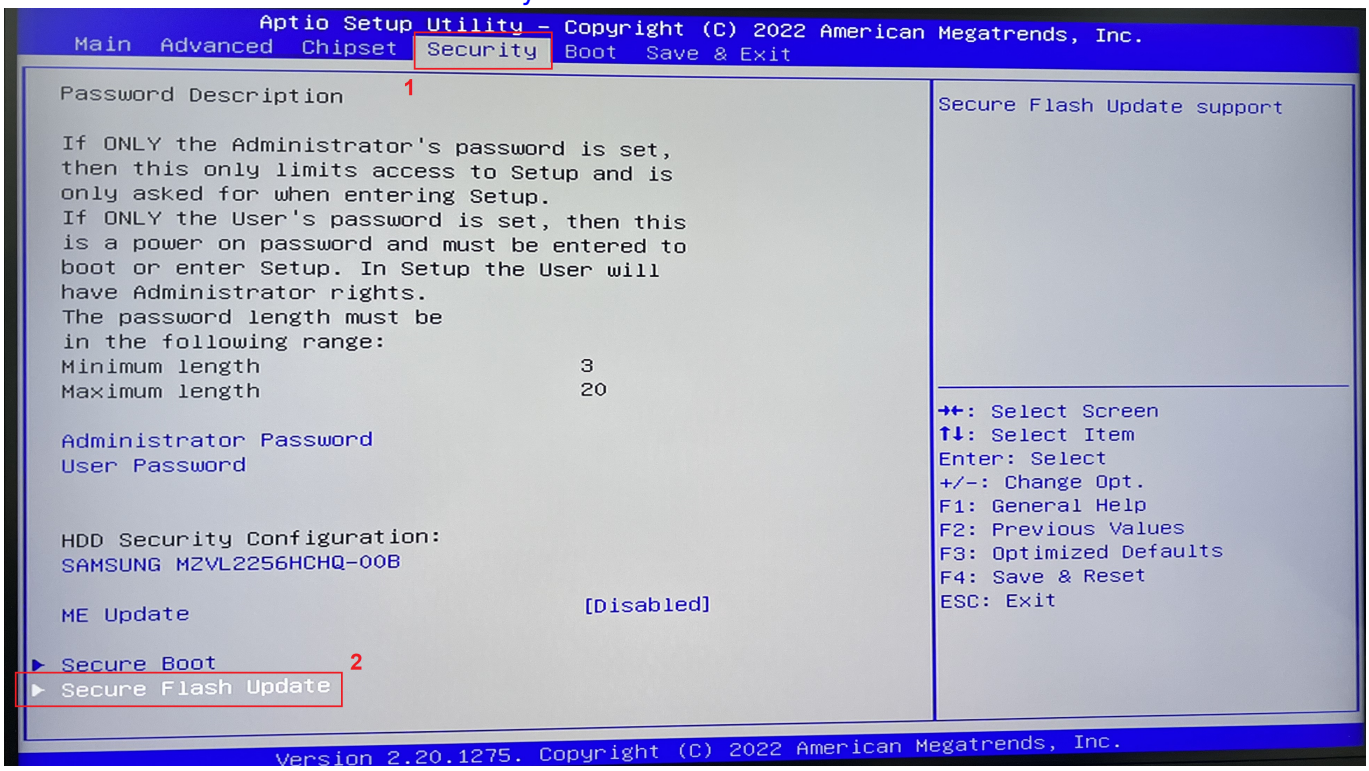

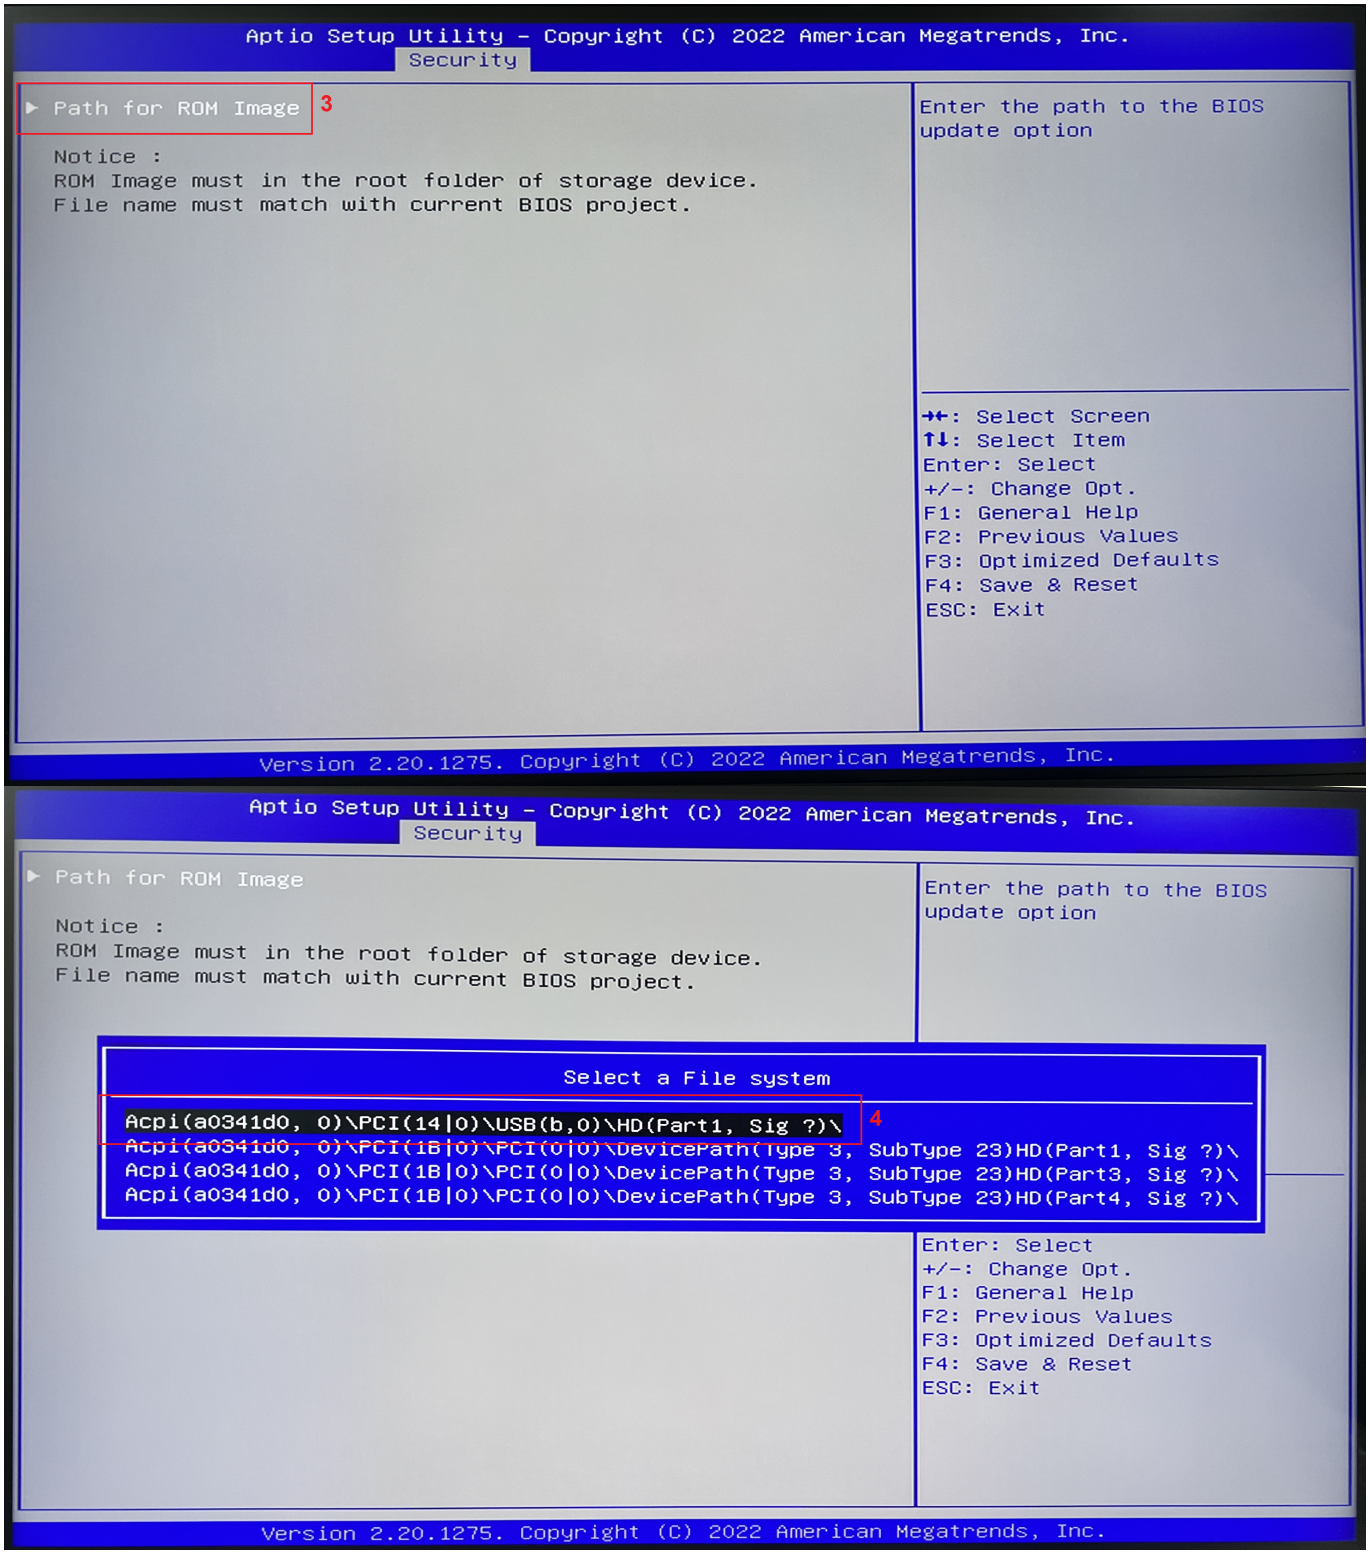

Aptio Setup Utility – Copyright (C) 2022 American Megatrends, Inc.
Security
▶ Path for ROM Image
3
Notice :
ROM Image must in the root folder of storage device.
File name must match with current BIOS project.
Enter the path to the BIOS update option
→←: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Reset
ESC: Exit
Version 2.20.1275. Copyright (C) 2022 American Megatrends, Inc.
Aptio Setup Utility – Copyright (C) 2022 American Megatrends, Inc.
Security
▶ Path for ROM Image
Notice :
ROM Image must in the root folder of storage device.
File name must match with current BIOS project.
Enter the path to the BIOS update option
Select a File system
Acpi(a0341d0, 0)\PCI(14|0)\USB(b,0)\HD(Part1, Sig ?)\
4
Acpi(a0341d0, 0)\PCI(1B|0)\PCI(0|0)\DevicePath(Type 3, SubType 23)HD(Part1, Sig ?)\
Acpi(a0341d0, 0)\PCI(1B|0)\PCI(0|0)\DevicePath(Type 3, SubType 23)HD(Part3, Sig ?)\
Acpi(a0341d0, 0)\PCI(1B|0)\PCI(0|0)\DevicePath(Type 3, SubType 23)HD(Part4, Sig ?)\
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Reset
ESC: Exit
Version 2.20.1275. Copyright (C) 2022 American Megatrends, Inc.

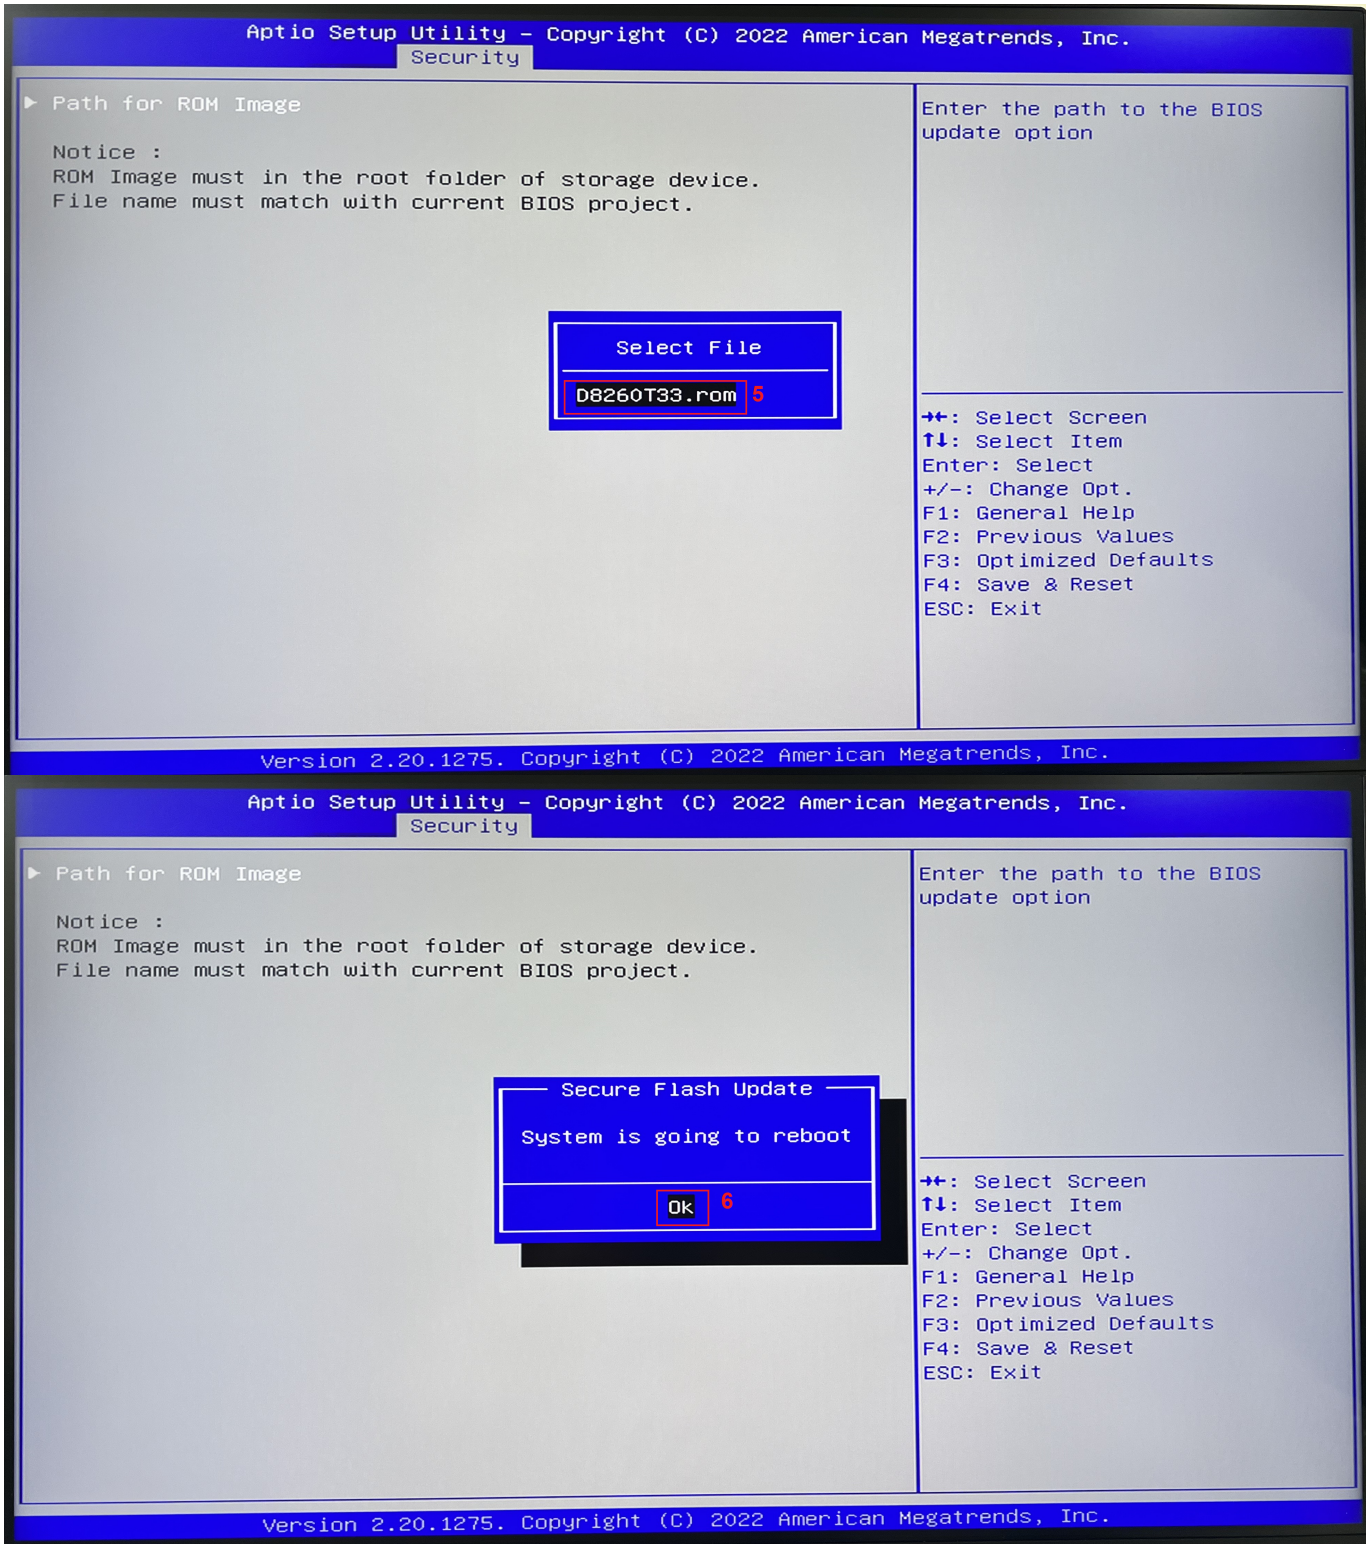


6. Recovery is generating in BIOS .

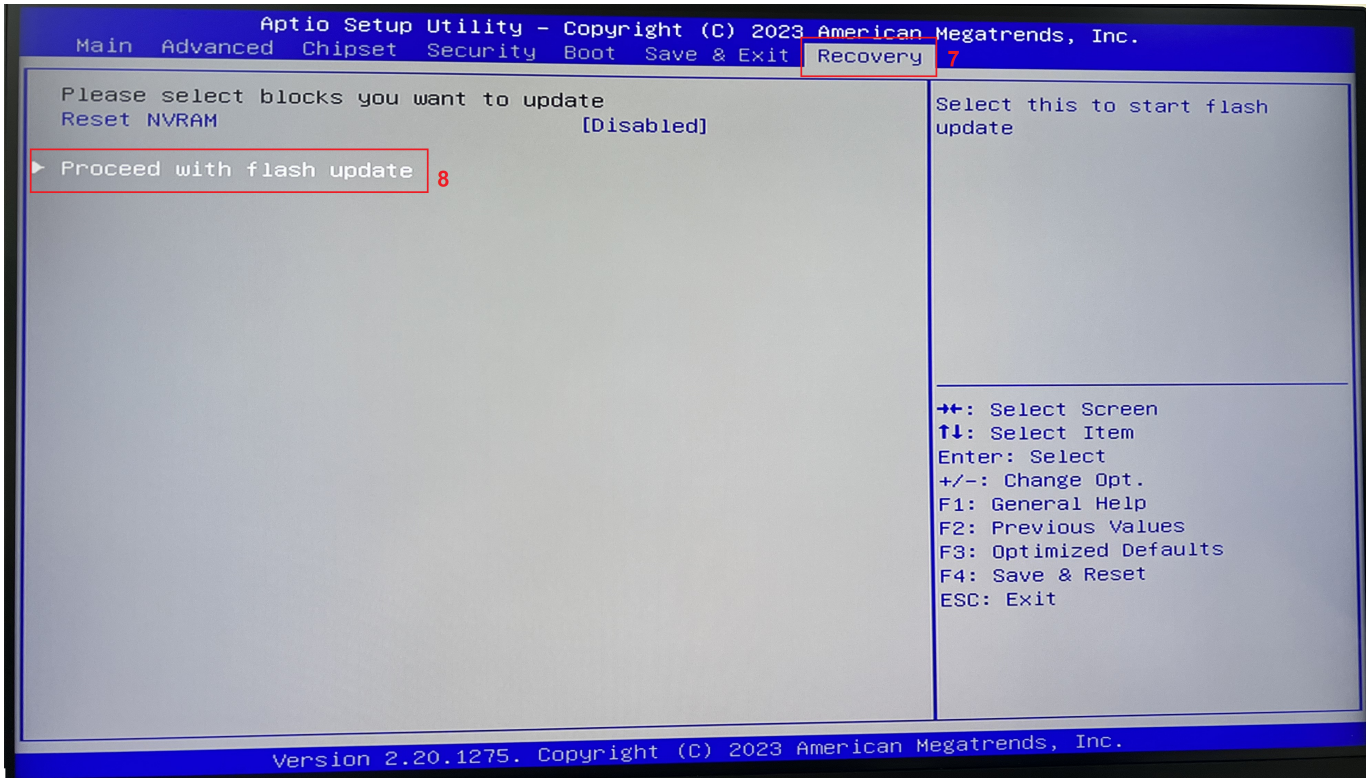


7. Select Recovery→Proceed with flash update and wait till finished the update.

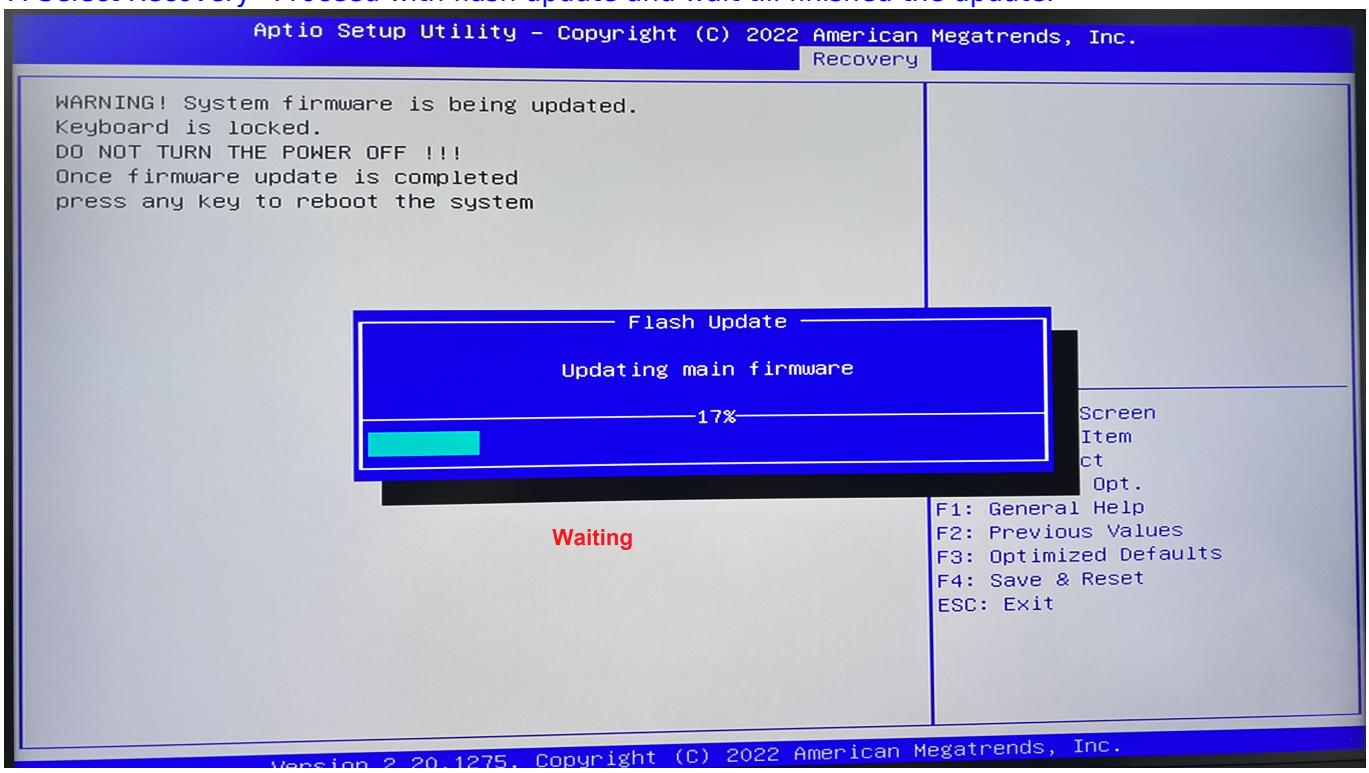

8. Once finished the update, press any key to reboot System.

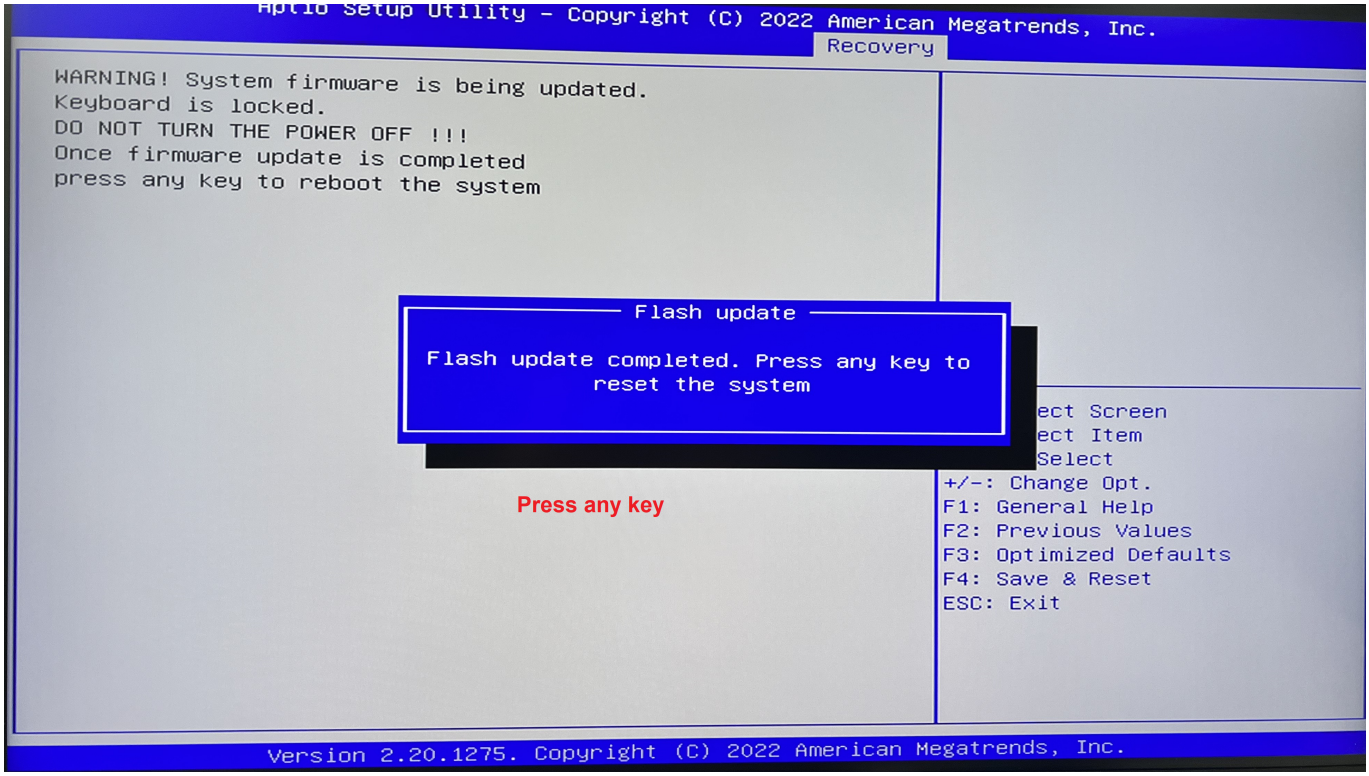

9. Check the BIOS version is now D8260T36.

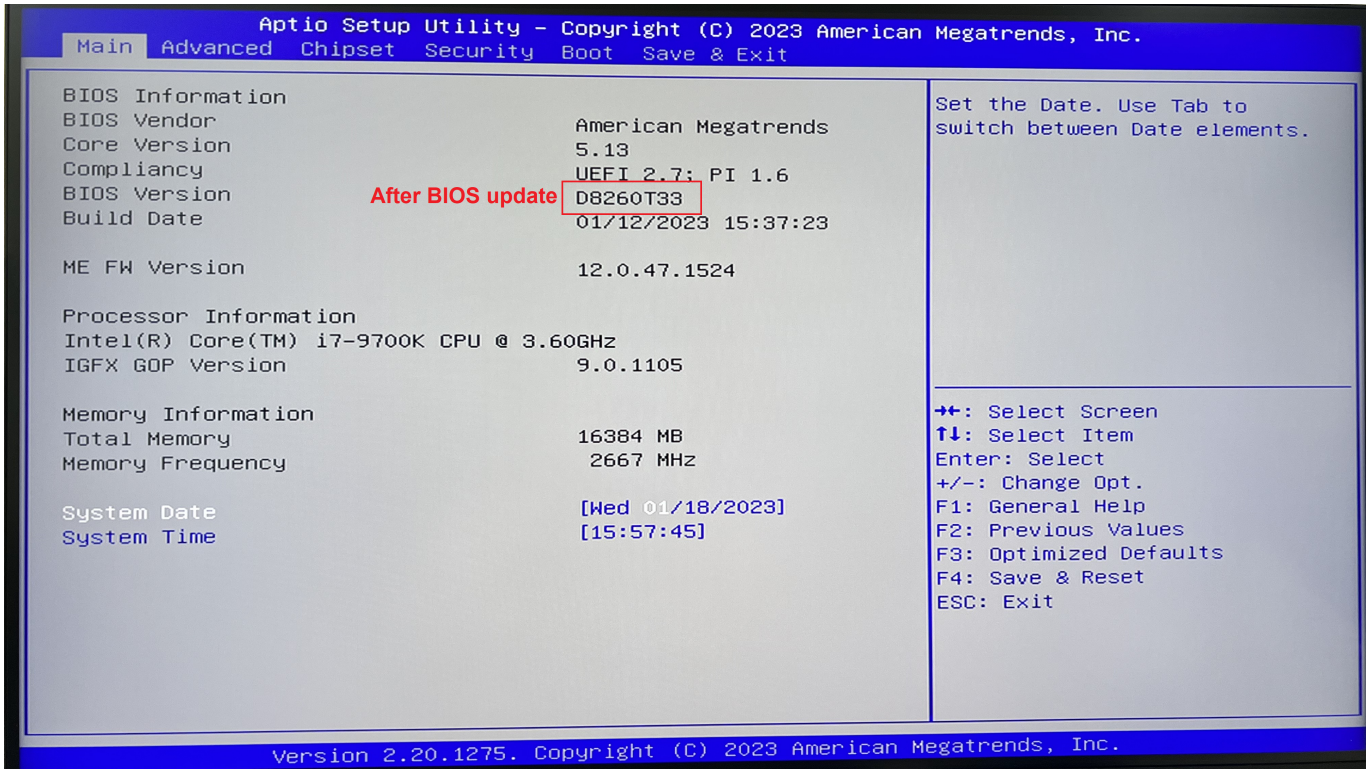

BIOS download file

- D8260T36.zip

From:
https://www.docs.sotm-audio.com/ - **SOtM docs**

Permanent link:
https://www.docs.sotm-audio.com/doku.php?id=en:smb_q370_bios_update

Last update: **2024/01/03 20:29**